

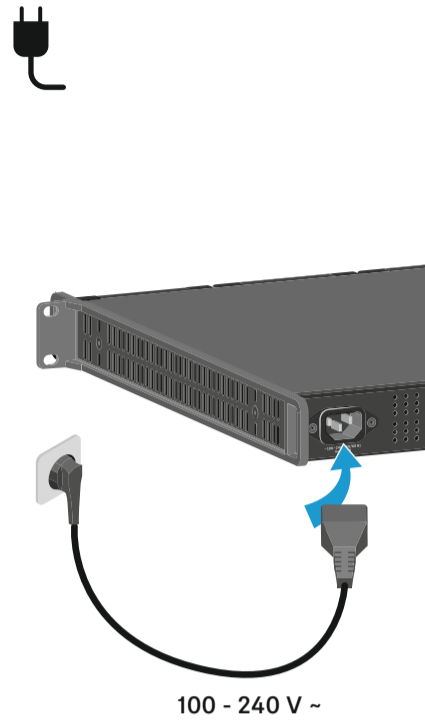


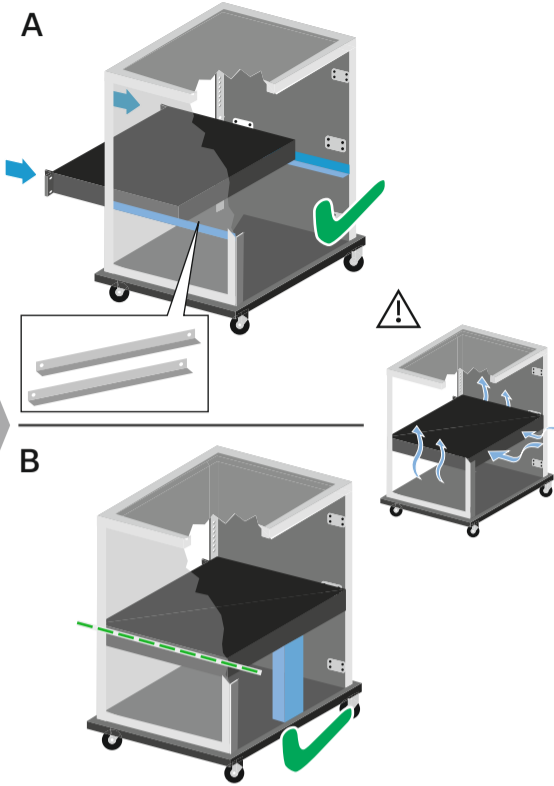



Digital 6000 L 6000 | LM 6060 | LM 6061 | LM 6062 | LM 6070

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Ρίκαοηje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서



Setup

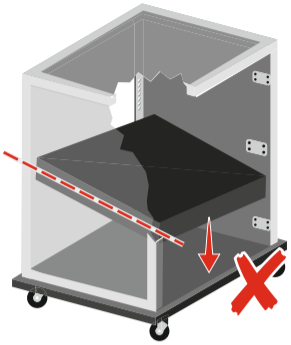






Remote Network - Sennheiser WSM
www.sennheiser.com/wsm

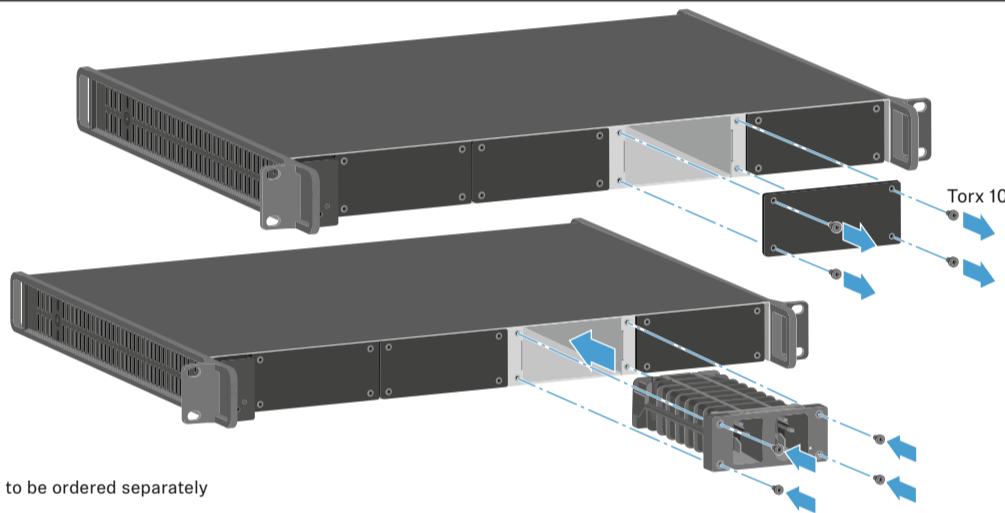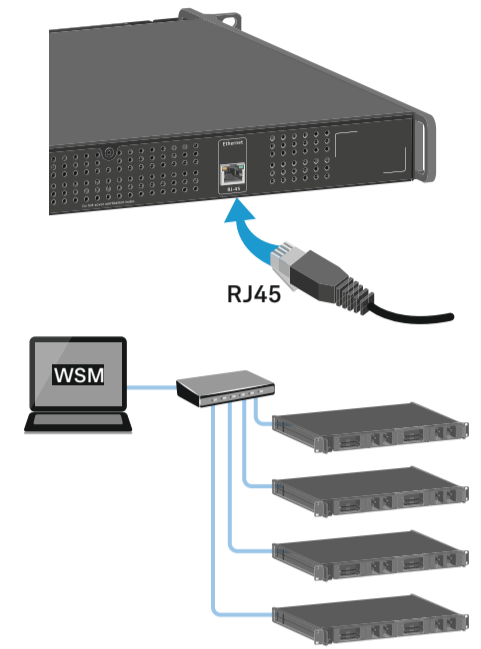

* to be ordered separately

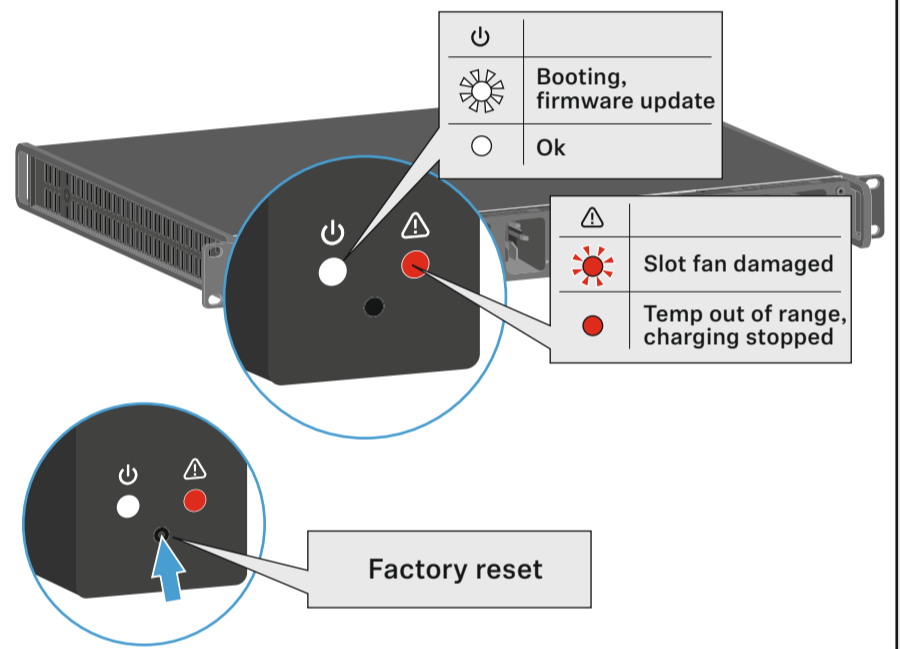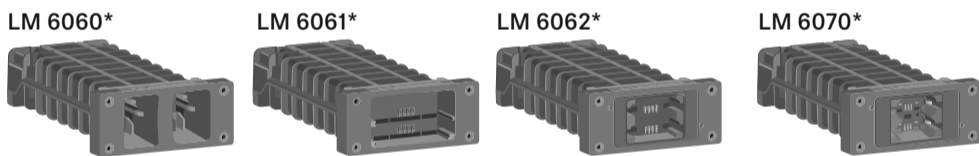

Charging

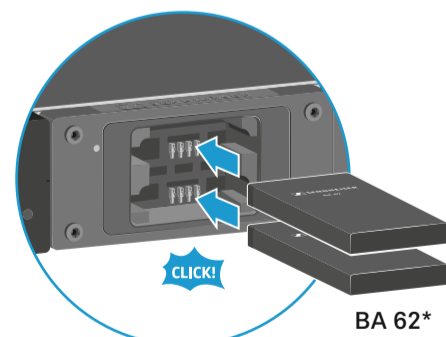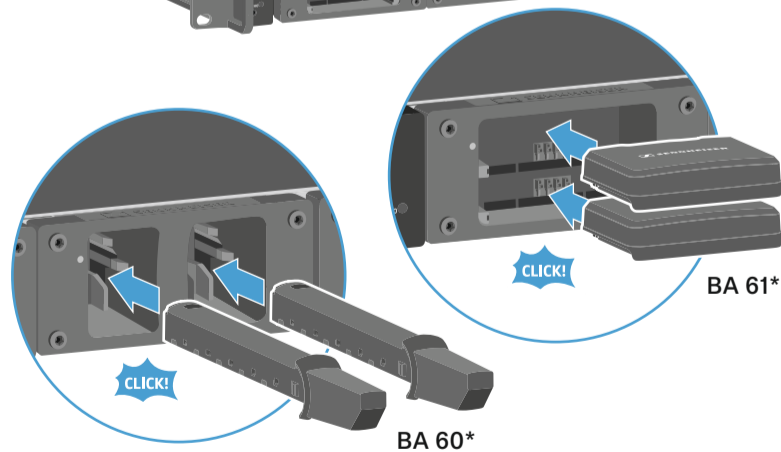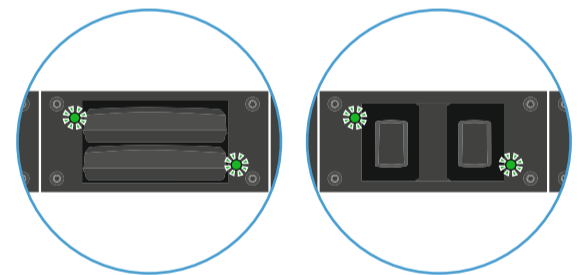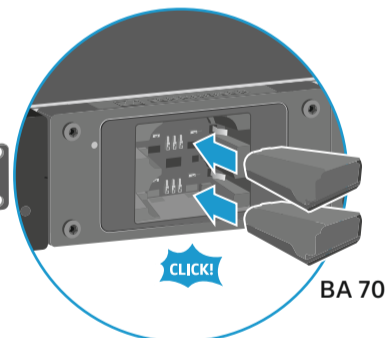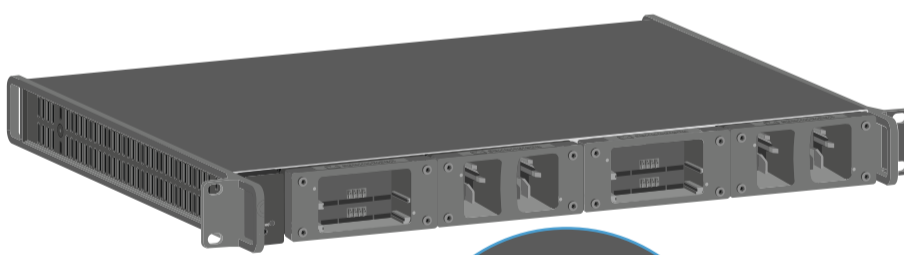

	Temp out of range, charging stopped
	Battery damaged
	Battery in regeneration
	Charging 0 % - 80 %
	Charging 81 % - 96 %
	Fully charged

* to be ordered separately

Digital 6000 System Instruction Manual

Sennheiser Documentation App



or online at
www.sennheiser.com/download
Digital 6000_

Firmware Update

Always use the latest firmware of the L 6000 for full functionality. The latest firmware is available for download at:

www.sennheiser.com/download
Digital 6000_