

04/2023

USER MENU

Note: Default parameters Highlighted in a grey colour.

Main Menu	Level 1	Level 2	Level 3	Choices / Values
SET UP	DMX Address	→	\rightarrow	001-512
	Ethernet Interface	Protocol	→	Disabled ArtNet sACN
		Custom IP Address	IP address byte 1	000-255
			IP address byte 2	000-255
			IP address byte 3	000-255
			IP address byte 4	000-255
		Custom IP Mask	IP mask byte 1	000-255
			IP mask byte 2	000-255
			IP mask byte 3	000-255
			IP mask byte 4	000-255
		Universe	\rightarrow	000-255
		Start Channel	\rightarrow	001-512
		Ethernet to DMX	\rightarrow	No / Yes



04/2023

Main Menu	Level 1	Level 2	Level 3	Choices / Values
	Pan / Tilt	Invert Pan	→	On / Off
		Invert Tilt	→	On / Off
		Swap Pan-Tilt	→	On / Off
		Encoder Pan-Tilt	→	On / Off
		P/T Homing mode	\rightarrow	Standard
				Sequenced
		Pan Home Def Pos	→	0 degree
				90 degrees
				180 degrees
				270 degrees
			\rightarrow	0 %
				12.5 %
				25 %
		Tilt Home Def Pos		50 %
				75 %
				87.5 % 100 %
		P/T Smooth	→	On / Off
	Color	Color Mixing	<i>→</i>	RGB / CMY
OPTION		Fix Wheel Shortcut	→	On / Off
	CMY Speed	→ →	<i>→</i>	Normal
				Fast
	Dimmer Curve	→	→	Dimmer Curve 1
				Dimmer Curve 2
				Dimmer Curve 3
				Dimmer Curve 4
	Display	→	→	On / Off
	Fan Mode	→	→	Auto
				SLN
				Theatre
				Constant
	Setting	Default Preset	Reset To Default	Are you sure ?
			Go Back	Yes / No
		User Preset 1	Load preset 1	Are you sure ?
			Save to preset 1	Yes / No
		User Preset 2	Load preset 2	Are you sure?
			Save to preset 2	Yes / No
		User Preset 3	Load preset 3	Are you sure ?
			Save to preset 3	Yes / No



04/2023

Main Menu	Level 1	Level 2	Level 3	Choices / Values
	System Errors	\rightarrow	→	Read / Reset
	Fixture Hours	Total Hours	→	Read
		Partial Hours	→	Read / Reset
	LED Hours	Total Hours	→	Read
		Partial Hours	\rightarrow	Read / Reset
	System Version	Disp	\rightarrow	Fw.rev.
		Net	→	Fw.rev.
		Ctr1 - XY	→	Fw.rev.
INFORMATION		Ctr2 - Motor	→	Fw.rev.
INFORMATION		Ctr3 - Motor	→	Fw.rev.
		Ctr4 - Motor	→	Fw.rev.
	DMX Monitor	Channels	→	Bit
	Fana Manitar	Base Fan	→	(%)
	Fans Monitor	Led Fan	→	(%)
	Network parameters	→	→	IP Address
				IP Mask
				MAC Address
	UID	\rightarrow	\rightarrow	UID: xxxxxxxxx
Manual	Reset	\rightarrow	\rightarrow	Yes / No
CONTROL	Channel	\rightarrow	\rightarrow	Bit Value
	\rightarrow	\rightarrow	\rightarrow	Pan / Tilt
	\rightarrow	\rightarrow	\rightarrow	Colour
TEST	\rightarrow	\rightarrow	\rightarrow	Beam
	\rightarrow	\rightarrow	\rightarrow	Gobo
	\rightarrow	\rightarrow	\rightarrow	All
ADVANCED	Access Code 1234	Upload Firmware	Transfer	Are you sure ? Yes / No
		Calibration	Channels	000 - 255
ADVANCED	Access Code 1234	Menu Locking	on Channels sing →	Unlock Code 1234
		Recover	→	Are you sure ? Yes / No



04/2023

SET UP MENU

Setup - DMX ADDRESS

It lets you select the address (DMX Address) for the control signal. A DMX address between 001 and 512 can be selected.

NOTE: Without the input signal, the displayed DMX Address blinks.

Setup - ETHERNET INTERFACE

It lets you set Ethernet settings to be assigned to the projector as indicated below:

Protocol

It lets you to set the control Protocol.

Custom IP Address

It lets you to set the Internet Protocol Address according to the control unit used.

Custom IP Mask

It lets you to set the Subnet Mask of the IP address.

Setup - UNIVERSE

It lets you set the "DMX Universe" to be assigned to a series of projectors with values between 000 and 255. A single DMX512 frame of 512 channels is referred to as a Universe

Setup - START CHANNEL

It lets you select the address (Art-Net) for the control signal. An Art-Net address between 001 and 512 can be selected.

Setup – ETHERNET TO DMX

It lets you enable/disable the transmission of the Ethernet protocol by DMX signal to all the connected projectors.

- NO: DMX transmission disabled.
- YES: DMX transmission enabled.



04/2023

OPTION MENU

Option - PAN / TILT

Invert Pan

It lets you enable (ON) Pan reverse movement. Select OFF to turn off or disable this option.

Invert Tilt

It lets you enable (ON) Tilt reverse movement. Select OFF to turn off or disable this option.

Swap Pan-Tilt

It lets you enable (ON) Pan and Tilt channel inversion (and simultaneously Pan fine and Tilt fine). Select OFF to turn off or disable this option.

Encoder Pan-Tilt

It lets you enable (ON) or disable (OFF) Pan and Tilt Encoder operations.

P/T Homing Mode

It lets you set the initial Pan and Tilt Reset mode.

- Standard: Pan & Tilt are simultaneously reset.
- Sequenced: Tilt is reset first followed by Pan.

Pan Home Def Pos

It lets you assign the Pan channel "home" position at the end of Reset (without a DMX input signal), selecting one from the 4 available positions:

- 0 degree
- 90 degrees
- 180 degrees
- 270 degrees

Tilt Home Def Pos

It lets you assign the Tilt channel "home" position at the end of Reset (without a DMX input signal), selecting one from the 7 available positions:

- 0%
- 12.5%
- 25%
- 50%
- 75%
- 87.5%
- 100%

P/T Smooth

It lets you enable (ON) a more linear fade in and out of the Pan & Tilt movement. Select OFF for a more reactive movement.

Option - COLOR

Color mixing

It lets you set the CMY color mixing system:

- RGB color mixing mode (Red Green Blue)
- CMY color mixing mode (Cyan Magenta Yellow)

Fixed wheel short-cut

Used for optimizing color change time (select ON) so that the disc turns in the direction that requires shorter movement. Select OFF to turn off or disable this option.

04/2023

OPTION MENU

Option - CMY SPEED


Lets you select two different CMY movement speed:

- Normal
- Fast

Option – DIMMER CURVE

Lets you select four different Dimmer curves:

- Dimmer curve 1
- Dimmer curve 2
- Dimmer curve 3
- Dimmer curve 4

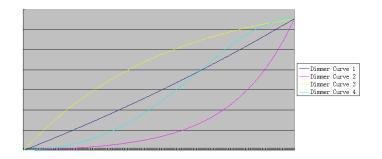

Option - DISPLAY

It lets you activate (ON) display brightness reduction after about 30 seconds in idle status. Select OFF to turn off or disable this option.

Option - FAN MODE

Defines the cooling mode:

- Auto: Cooling increase/decrease in correlation to the LED engine temperature
- SLN: Fan power always at minimum range, light output change accordingly with ambient temperature.
- Theatre: Fan power always at a constant range, light output constantly reduced.
- Constant: Fan power at maximum range.

Option – SETTING

Used to save 3 different settings of the items in the option menu and relevant submenus.

- Default preset (*)
- User preset 1
- User preset 2
- User Preset 3
 - Load preset 'X' is used to recall a previously stored configuration.
 - Save to preset 'X' is used to save the current configuration.

(*) DEFAULT PRESET

It lets you restore default values on all option menu items and relevant submenus.



04/2023

INFORMATION MENU

Information - SYSTEM ERRORS

It displays a list of errors that occurred when the projector was turned on.

Information - FIXTURE HOURS

It lets you view projector working hours (total and partial).

Total counter

It counts the number of projectors working life hours (from construction to date).

Partial counter

It counts the number of projector partial working life hours from the last reset to date.

Press OK to reset the partial counter. A confirmation message appears on the display "Reset" otherwise select "Go Back" to avoid this kind of operation.

Information - LED HOURS

It lets you view LED working hours (total and partial).

Total counter

It counts the number of projectors working hours with the LED on (from construction to date).

Partial counter

It counts the number of LED partial working hours from the last reset to date.

Press **OK** to reset the partial counter. A confirmation message appears on the display: Select **Reset** to confirm or **Go Back** to undo the operation.

Information - SYSTEM VERSION

It lets you view the hardware and software versions for each electronic board in the projector.

- Disp
- Net
- Ctr1-XY
- Ctr2-Motor
- Ctr3-Motor
- Ctr4-Motor

Information - DMX MONITOR

It lets you view the level of projector DMX channels in bit.

Information - FANS MONITOR

It lets you view the percentage of each fan installed in the projector:

- Base Fan (Base cooling fan)
- Led Fan (LED cooling fan)

Information - NETWORK PARAMS

Lets you view the projector "Network" parameters meaning:

IP address: Internet Protocol address (two projectors must not have the same IP address)

IP mask: 255.0.0.0

Mac address: Media Access Control; the projector's Ethernet Address

Information - UID

Shows the exclusive address of the fixture to use communicate via RDM.



04/2023

MANUAL CONTROL

Manual Control - RESET

It lets you reset the projector from the projector control panel.

Manual Control - CHANNEL

It lets you set the channel DMX levels from the projector control panel (value between 0 and 255 bit).

TEST MENU

It lets you test the correct operations of effects using pre-saved Tests:

- Pan/Tilt
- Colour
- Beam
- Gobo
- All

ADVANCED MENU

To log into the "Advanced Menu", enter the code (1234)

Advanced - UP LOAD FIRMWARE

It lets you transfer "firmware" from one projector to all other connected projectors. A confirmation message appears on the display (Are you sure ?) Select YES to confirm or NO to abort this operation.

IMPORTANT: It is possible to transfer the firmware only with the same fixtures models.

IMPORTANT: We recommend to upload the firmware to a maximum 5/6 units per time.

Advanced - CALIBRATION

It lets you make small mechanical adjustments on some effects to perfectly align projectors from the control panel.

Advanced - MENU LOCKING

It allows you to assign a password to lock the access to the ADVANCED menu to avoid any wrong setting or operation by people there are not from the technical staff. The default Unlock Code is: 1234

IMPORTANT: If necessary to reset any custom code go to Option \rightarrow Setting \rightarrow Default Preset \rightarrow Reset to default, it will set all the default setting and restore the coder to 1234.

Advanced - RECOVER

The recover function allows to restore the functionality of the electronic boards following a fail during the firmware update process of the fixture. Please refer to the "Recover function" tech document for the detail of the procedure.