

DMX CHART 8 BIT

CHANNEL	CHANNEL MODE	CHANNELS
1	Dimmer	STANDARD
2	CCT	
3	Effect	ADVANCED
4	Strobo Ton	
5	Strobo Toff	
6	PWM LED	

DMX CHANNEL	VALUE	PERCENT	FUNCTION
1	0 - 255	0 - 100	Dimming
2	0 - 255	0 - 100	CCT 2700 - 6500
3	0 - 255	-	0 - 31 = DISABLE 32 - 63 = CANDLE 64 - 95 = THUNDER 96 - 127 = TV 128 - 159 = STROBO 160 - 191 = NEON 192 - 223 = PROGRESS 224 - 255 = PAPANAZZI
4	0 - 255	-	0 - 2550 ms
5	0 - 255	-	0 - 2550 ms
6	0 - 255	-	0 - 42 = 1000 Hz 43 - 85 = 1500 Hz 86 - 127 = 2000 Hz 128 - 170 = HIFREQ 1 171 - 212 = HIFREQ 2 213 - 255 = HIFREQ 3

DMX CHART 16 BIT

CHANNEL	CHANNEL MODE	CHANNELS
1	Dimmer	STANDARD
2	Dimmer fine	
3	CCT	
4	Effect	ADVANCED
5	Strobo Ton	
6	Strobo Toff	
7	PWM LED	

DMX CHANNEL	VALUE	PERCENT	FUNCTION	
HI 1	LO 2	0 - 65535	0 - 100	Dimming
3	0 - 255			
4	0 - 255	-	0 - 31 = DISABLE 32 - 63 = CANDLE 64 - 95 = THUNDER 96 - 127 = TV 128 - 159 = STROBO 160 - 191 = NEON 192 - 223 = PROGRESS 224 - 255 = PAPANAZZI	
5	0 - 255	-	0 - 2550 ms	
6	0 - 255	-	0 - 2550 ms	
7	0 - 255	-	0 - 42 = 1000 Hz 43 - 85 = 1500 Hz 86 - 127 = 2000 Hz 128 - 170 = HIFREQ 1 171 - 212 = HIFREQ 2 213 - 255 = HIFREQ 3	