

### On/Off

**EK**

**SKP**

**SKM-S**

**SK**

Off -> On

**EK/SKP/SK/SKM-S**

short on

On -> Off

**EK/SKP/SK/SKM-S**

long off

### EK Setup

3.5 mm

3.5 mm

3.5 mm

XLR

OR

[www.sennheiser.com/download](http://www.sennheiser.com/download)

**Smart Assist**

Download on the **App Store**

**GET IT ON Google Play**

Sennheiser electronic SE & Co. KG

Am Labor 1, 30900 Wedemark, Germany  
[www.sennheiser.com](http://www.sennheiser.com)

Printed in Germany  
Publ. 05/24, 592859/A05

## Evolution Wireless Digital Portable

EW-DP EK, EW-D SK, EW-DP SKP, EW-D SKM-S

Quick Guide

Kurzanleitung

Guide rapide

Guida rapida

Guía de inicio rápido

Guia rápido

Beknopte handleiding

Krótká instrukcja obsługi

Snabbguide

Kort vejledning

Pikaohje

Γρήγορος οδηγός

Kisa Kilavuz

Краткая инструкция

簡要説明

快速使用指南

クイックガイド

요약 안내서

### Mute

**SK**

**SKP**

**SKM-S**

### EK Power Supply / Charging

USB-C Power

Powerbank

### EW-DP EK

LINK LED

DATA LED

UP

DOWN

SET

SYNC

ESC ON/OFF

Headphone Output

USB-C Power/Charging

MIC OUT

USB POWER

Microphone Output

### Battery

**EK**

optional: 2 AA batteries

BA 70 rechargeable battery (included)

insert batteries simultaneously

### Battery

**SKP**

2 AA batteries (included)

optional: BA 70 rechargeable battery

### EW-DP SKP

SYNC

48V

ON/OFF

REC

MUTE

MicroSD

MIC

Micro-SD Slot

Phantom power

MUTE

Microphone Input

micro

Battery slot

FIX/UNFIX

3-poles XLR plug

unbalanced Input

PIN 1	↓
PIN 2	- (P48)
PIN 3	+

### Battery

**SK**

2 AA batteries (included)

\*optional: BA 70 rechargeable battery

### Battery

**SKM-S**

2 AA batteries (included)

\*optional: BA 70 rechargeable battery

### EW-D SKM-S

ON/OFF

DATA LED

SYNC

LINK LED

MUTE

### EW-D SK

DATA LED

LINK LED

SYNC

MUTE

ON/OFF

### EK Display

Default screen

SENNHEISER  
EW-D 470.200 MHz (01) +18 dB

Instruction Manual

### LEDs

LINK LED/ PWR LED (SKP)	
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- Device switched off

  

DATA LED	
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

  

SKP: DATA, LINK, PWR

SK: DATA, LINK

EK: LINK, DATA

SKM-S: DATA, LINK

### Identify/Battery check

On -> Identify/Check

**SK/SKP/SKM-S**

short Identify/Check

LINK LED SK/SKP/SKM-S	
	≤ 100 %
	≤ 60 %
	≤ 20 %

SKM-S, SKP, SK

Display of synced EK

### EK Menu

www.sennheiser.com/download

Instruction manual  
Bedienungsanleitung  
Notice d'emploi  
Istruzioni per l'uso  
Instrucciones de manejo  
Manual de instruções  
Gebruiksaanwijzing  
Instrukcja obsługi  
Bruksanvisning  
Betjenings vejledning  
Käyttöohje  
Οδηγίες λειτουργίας  
Kullanım kılavuzu  
Инструкция по эксплуатации  
使用说明书  
取扱説明書  
사용 설명서

Smart Assist

Available on the App Store | Google play

<b>Gain</b> Output level	→ SET →	Gain +21 dB
<b>Output level</b> Headphone	→ SET →	Output level -15 dB
<b>Headphone</b> Mute switch	→ SET →	Headphone
<b>Mute switch</b> Auto scan	→ SET →	Mute switch ignored
<b>Auto scan</b> Channel	→ SET →	Auto scan 526.000 MHz (94)
<b>Channel</b> Frequency	→ SET →	Channel 94 526.000 MHz
<b>Frequency</b> Brightness	→ SET →	Frequency 470 .200 MHz
<b>Brightness</b> Reset	→ SET →	Brightness 60 %
<b>Reset</b>	→ SET →	Reset to factory defaults?

### EK Stacking/ Mounting plate

Mounting instructions

### SKP Attach & Record

Attach microphone

XLR-Mic

Record

- 1 insert Micro SD-Card
- 2 long-long press (11 sec.) ▶ format Micro SD-Card
- 3 short press ▶ start Rec.
- 4 long press (3 sec.) ▶ stop Rec.

Rec LED Pattern → Online Manual

### Mic Handling

SKM-S

ME 2

ME 3

ME 4

25 cm (10")

2...3 cm (1")