

Antennas

*optional accessories:
ADP UHF (470 - 1075 MHz)
AD 1800 (1400 - 2400 MHz)

www.sennheiser.com/download

Smart Assist

Download on the **App Store**

GET IT ON Google Play

Evolution Wireless Digital

EW-DX EM 2
EW-DX SK
EW-DX SKM

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드

Sennheiser electronic SE & Co. KG
Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 03/24, 587467/A03

Audio Out

6.3 mm XLR-3

Power supply

EU US UK AU KOR CN

Remote control

Smart Assist App

Download on the **App Store**

GET IT ON Google Play

Wireless Systems Manager (WSM)
www.sennheiser.com/wsm

Sennheiser Control Cockpit (SCC)
www.sennheiser.com/control-cockpit-software

In the box

Rack mount angles
Power supply adapters
Power supply

Battery

2 AA batteries BA 70 rechargeable battery

1 2 3 4

2 AA batteries BA 70 rechargeable battery

EW-DX EM 2

Headphone output LED ch. 1 Channel 1 select UP/DOWN SET ESC
Headphone volume control LED ch. 2 Channel 2 select Display SYNC ON/OFF

PoE / Network control (WSM / SCC) Audio outputs Antenna inputs

On/Off

Off -> On	EM/SK/SKM(-S) short on
On -> Off	EM/SK/SKM(-S) long off

Display of SK / SKM(-S)

Device on: CH.NAME 478.125

Device off: CH.NAME 478.125 off

The display of the SK and SKM(-S) will stay on when the device is switched off.

EW-DX SKM-S | EW-DX SKM


ON/OFF DATA LED ESC UP DOWN SET MUTE (EW-DX SKM-S)

EW-DX SK | EW-DX SK 3-PIN

EW-DX SK 3.5 mm jack EW-DX SK 3-PIN 3 pin socket

LINK LED DATA LED SYNC MUTE Display ON/OFF ESC SET UP DOWN

Display

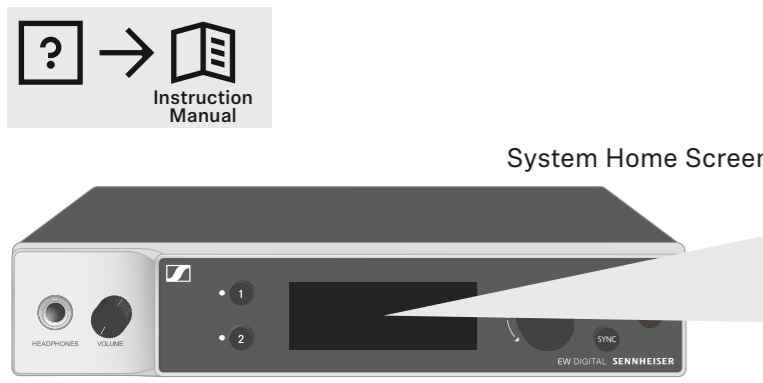

Frequency (Channel 1) Link name (Channel 1) Link name (Channel 2) Frequency (Channel 2)

Transmitter battery (Ch.1) Transmitter battery (Ch.2)

Radio frequency level and link quality (Channel 1) Mute mode (Channel 1) System icons (see instruction manual) Radio frequency level and link quality (Channel 2) Transmitter audio level (Channel 2)

GUITAR 510.100 **VOICE** 521.100

Channel 1 Home Screen

Link name Frequency

GUITAR 510.100 MHz

Gain -10 dB AF Out +18 dB Low Cut 80 Hz

Radio frequency level and link quality Transmitter audio level Mute mode Transmitter battery Audio settings

Channel 2 Home Screen

Frequency Link name

VOICE 521.100 MHz

Gain -10 dB AF Out +18 dB Low Cut 80 Hz

Audio settings Transmitter battery Radio frequency level and link quality Transmitter audio level

LEDs

LED Ch.1/2 (EM 2) LINK LED (SK/SKM)

	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- No link - Device switched off

EM 2

SKM(-S)

DATA LINK

LED Ch.1/2 (EM 2) DATA LED (SK/SKM)

	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

SK

DATA LINK

Instruction Manual

Key Lock

Auto Lock 10 s

Instruction Manual

Locked Unlock?

Locked Unlock?

Instruction Manual

Frequency setup

1 SKM/SK off!

2 select channel

3 select frequency

4 SYNC

OR

3 perform auto setup

Instruction Manual

Sync

1 select channel & set parameters 2 short press

3 SKM(-S) SK

short press

4

Press SYNC on mobile device

Sync successful

Mute

Instruction Manual

SK SKM-S

SKM | SKM-S

Instruction manual | Bedienungsanleitung | Notice d'emploi | Istruzioni per l'uso | Instrucciones de manejo | Manual de instruções | Gebruiksaanwijzing | Instrukcja obsługi | Bruksanvisning | Betjenings vejledning | Käyttöohje | Οδηγίες λειτουργίας | Kullanım kılavuzu | Инструкция по эксплуатации | 使用说明书 |取扱説明書 | 사용 설명서 |

Smart Assist

Available on the App Store

ANDROID APP ON Google play