

# **TVL SOFTLIGHT DW™**

user manual

©2020 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

**ELATION PROFESSIONAL** and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

**Elation Professional USA** | 6122 S. Eastern Ave. | Los Angeles, CA. 90040 323-582-3322 | 323-832-9142 fax | www.elationlighting.com | info@elationlighting.com

**Elation Professional B.V.** | Junostraat 2 | 6468 EW Kerkrade, The Netherlands +31 45 546 85 66 | +31 45 546 85 96 fax | www.elationlighting.eu | info@elationlighting.eu

**Elation Professional Mexico** | AV Santa Ana 30 | Parque Industrial Lerma, Lerma, Mexico 52000 +52 (728) 282-7070



# DOCUMENT VERSION

Due to additional product features and/or enhancements, an updated version of this document may be available online. www.elationlighting.com Please check Elation Service for the latest revision/update of this manual, before beginning installation and/or programming.

| Date     | Document<br>Version | Software<br>Version ≥ | DMX<br>Channel Modes | Notes   |
|----------|---------------------|-----------------------|----------------------|---|
| 11/21/16 | 1                   | 1.1                   | 2/3/4/5/6/7          | Initial release.  |
| 05/05/17 | 2                   | 1.2                   | N/C                  | Added Frequency (Refresh and Gamma) settings to system menu.                  |
| 06/26/17 | 2.2                 | N/C                   | N/C                  | Updated DMX chart and added ETL.  |
| 11/4/19  | 2.4                 | N/C                   | N/C                  | Updated LED Frequency Refresh Rate default to 900Hz, and updated Fuse to T2A. |
| 03/16/20 | 2.6                 | N/C                   | N/C                  | Added Lock selection in Display Setting                                       |
| 11/10/20 | 2.8                 | 1.6                   | N/C                  | Updated Primary/Secondary mode, system menu                                   |

# CONTENTS

| General Information                | 4  |
|------------------------------------|----|
| Warranty                           | 6  |
| Safety Instructions and Guidelines | 7  |
| Fixture Overview                   | 9  |
| Barn Door Installation             | 10 |
| Fixture Installation               | 11 |
| Fixture Menu                       | 14 |
| DMX Channel Functions And Values   | 18 |
| Cleaning and Maintenance           | 19 |
| Technical Specifications           | 20 |
| Optional Accessories               | 22 |

**GENERAL INFORMATION** 

**INTRODUCTION** 

This fixture has been designed to perform reliably for years when the guidelines in this

booklet are followed. Please read and understand the instructions in this manual carefully

and thoroughly before attempting to operate this unit. These instructions contain

important information regarding safety during use and maintenance.

**UNPACKING** 

Every fixture has been thoroughly tested and has been shipped in perfect operating

condition. Carefully check the shipping carton for damage that may have occurred during

shipping. If the carton appears to be damaged, carefully inspect your unit for damage

and be sure all accessories necessary to operate the unit have arrived intact. In the event

damage has been found or parts are missing, please contact our customer support team

for further instructions. Please do not return this unit to your dealer without first

contacting customer support at the number listed below. Please do not discard the

shipping carton in the trash. Please recycle whenever possible.

**BOX CONTENTS** 

Barn Door

Barn Door Safety Cable (USA Only)

IP65 Locking Power Connector Cable

4

**CUSTOMER SUPPORT** 

Elation Professional® provides a customer support line, to provide set up help and to answer

any question should you encounter problems during your set up or initial operation. You may

also visit us on the web at www.elationlighting.com for any comments or suggestions. For

service related issue please contact Elation Professional®.

ELATION SERVICE USA - Monday - Friday 8:00am to 5:00pm PST

Voice: 323-582-3322

Fax: 323-832-9142

E-mail: support@elationlighting.com

ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET

Voice: +31 45 546 85 30 Fax: +31 45 546 85 96

E-mail: support@elationlighting.eu

WARRANTY REGISTRATION

Please complete and mail in the enclosed warranty card or register online:

http://www.elationlighting.com/Login.aspx to validate your purchase. All returned service

items whether under warranty or not, must be freight pre-paid and accompany a return

authorization (R.A.) number. The R.A. number must be clearly written on the outside of the

return package. A brief description of the problem as well as the R.A. number must also be

written down on a piece of paper and included in the shipping container. If the unit is under

warranty, you must provide a copy of your proof of purchase invoice. Items returned without

a R.A. number clearly marked on the outside of the package will be refused and returned at

customer's expense. You may obtain a R.A. number by contacting customer support at 323-

582-3322.

IMPORTANT NOTICE!

There are no user serviceable parts inside this unit. Do not attempt any repairs yourself;

doing so will void your manufactures warranty. Damages resulting from modifications

to this fixture and/or the disregard of safety and general user instructions found in this

user manual void the manufactures warranty and are not subject to any warranty

claims and/or repairs.

5

# LIMITED WARRANTY

- A. Elation Professional® hereby warrants, to the original purchaser, Elation Professional® products to be free of manufacturing defects in material and workmanship for a period of two years (730 days), and Elation Professional® product rechargeable batteries to be free of manufacturing defects in material and workmanship for a period of six months (180 days), from the original date of purchase. This warranty excludes discharge lamps and all product accessories. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, send the product only to the Elation Professional® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional® will pay return shipping charges only to a designated point within the United States. If any product is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional® shall have no liability what so ever for loss and/or or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which Elation Professional® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional® factory unless prior written authorization was issued to purchaser by Elation Professional®; if the product is damaged because not properly maintained as set forth in the product instructions, guidelines and/or user manual.
- D. This is not a service contract, and this warranty does not include any maintenance, cleaning or periodic check-up. During the periods as specified above, Elation Professional® will replace defective parts at its expense and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional®. All products covered by this warranty were manufactured after January 1, 1990, and bare identifying marks to that effect.
- E. Elation Professional® reserves the right to make changes in design and/or performance improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with the products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty periods set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said periods have expired. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional® be liable for any loss and/or damage, direct and/or consequential, arising out of the use of, and/or the inability to use, this product.
- G. This warranty is the only written warranty applicable to Elation Professional® products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

# SAFETY INSTRUCTIONS AND GUIDELINES

This fixture is an extremely sophisticated piece of electronic equipment. To guarantee a smooth operation, it is important to follow all instructions and guidelines in this manual. The manufacturer of this device is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture and only the original rigging parts (omega brackets) included with this fixture should be used for installation. Any modifications to the fixture and/or the mounting hardware included will void the original manufactures warranty and increase the risk of damage and/or personal injury.

## PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED



DO NOT PLUG FIXTURE INTO A DIMMER PACK!

**NEVER OPEN THIS FIXTURE WHILE IN USE!** 



**UNPLUG POWER BEFORE SERVICING FIXTURE!** 

**NEVER TOUCH FIXTURE DURING OPERATION, AS IT MAY BE HOT!** 

**KEEP FLAMMABLE MATERIALS AWAY FROM FIXTURE!** 



INDOOR / DRY LOCATIONS USE ONLY!
DO NOT EXPOSE FIXTURE TO RAIN AND MOISTURE!



NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE! RETINA INJURY RISK - MAY INDUCE BLINDNESS!

SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!


# SAFETY INSTRUCTIONS AND GUIDELINES


- **DO NOT TOUCH** the fixture housing during operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before serving.
- **DO NOT** shake fixture, avoid brute force when installing and/or operating fixture.
- **DO NOT** operate fixture if the power cord has become frayed, crimped and/or damaged. If the power cord is damaged, replace it immediately with a new one of similar power rating.
- DO NOT block any air ventilation slots. All fan and air inlets must remain clean and never blocked. Allow approx. 6" (15cm) between fixture and other devices or a wall for proper cooling.
- When installing fixture in a suspended environment, always use mounting hardware that
  is no less than M10 x 25 mm, and always install fixture with an appropriately rated safety
  cable.
- Always disconnect fixture from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end, never pull out the plug by tugging the wire portion of the cord.
- During the initial operation of this fixture, a light smoke or smell may emit from the interior
  of the fixture. This is a normal process and is caused by excess paint in the interior of
  the casing burning off from the heat associated with the lamp and will decrease gradually
  over time.
- Consistent operational breaks will ensure the fixture will function properly for many years to come.
- Use the original packaging and materials to transport the fixture in for service.

## LED LIFE

The average LED Life (hours) may vary depending on several factors including but not limited to: Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control and Dimming.


# FIXTURE OVERVIEW

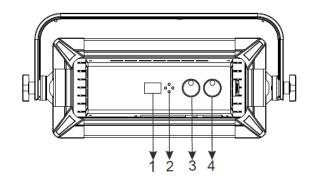

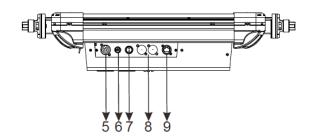


- 1. LCD Menu Function Display
- 2. MENU, UP, DOWN, ENTER Buttons
- 3. DIMMER Dial (manual control)
- 4. COLOR TEMPERATURE DIAL (manual control)
- 5. IP65 Locking Power Connector IN
- 6. FUSE (T2A)
- 7. BATTERY Connection NOT SUPPORTED AT THIS TIME
- 8. 5pin DMX IN/OUT
- 9. Ethernet (RJ45) IN

# BARN DOOR INSTALLATION

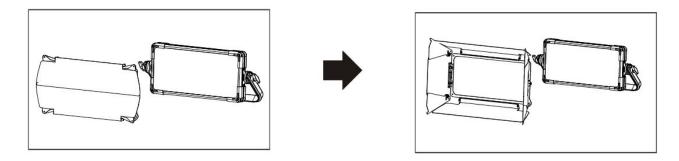

- 1. Remove barn door from packaging.
- 2. Open barn door fully and position in front of the fixture.

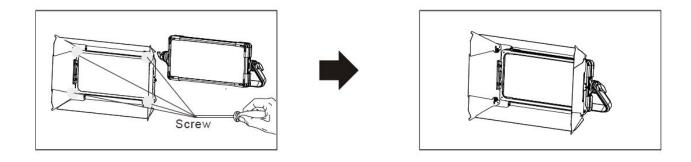

- 3. Align each of the (4) mounting screws by pushing them into place.
- 4. Secure each screw by hand first turning clockwise.
- 5. Tighten each screw with a screwdriver. DO NOT OVER TIGHTEN SCREWS!



# FIXTURE INSTALLATION



# FLAMMABLE MATERIAL WARNING

Keep fixture at least 5.0 ft (1.5m) away from any flammable materials, decorations, pyrotechnics, etc.



# ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.

### DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!

Fixture MUST be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before rigging/mounting the fixture to any metal truss/structure or placing the fixture on any surface, a professional equipment installer MUST be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture, clamps, cables, and accessories.

Maximum ambient operating temperature for this fixture 104°F. (40°C)

Do not use the fixture above this temperature.

Maximum external surface temperature of this fixture is **185°F** (**85°C**).

Fixture should be installed in areas outside walking paths, seating areas, or away from areas were unauthorized personnel might reach the fixture by hand.


NEVER stand directly below the fixture when rigging, removing or servicing.

Overhead fixture installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable that can hold 10 times the weight of the fixture.

Allow approximately 15 minutes for the fixture to cool down before serving.

### **MOUNTING POINTS**


Overhead mounting requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the device. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury. Fixture is fully operational in the specific mounting positions as illustrated below.

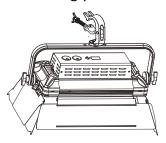






ALWAYS ATTACH A SAFETY CABLE TO
THE BARN DOOR AND TO THE FIXTURE
WHENEVER INSTALLING THIS IN A
SUSPENDED ENVIRONMENT TO ENSURE
THE BARN DOOR AND/OR THE FIXTURE
WILL NOT DROP IF THERE IS A
HARDWARE FAILURE.

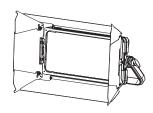

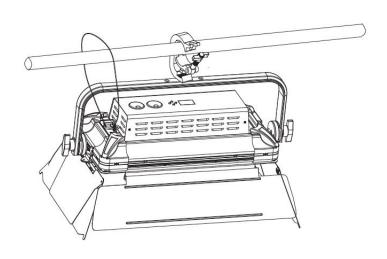


### **CLAMP MOUNTING**

The fixture includes an adjustable mounting yoke that attaches to both sides of the fixture. When mounting this fixture to truss be sure to secure an appropriately rated clamp to the mounting yoke using a M10 screw fitted through the center hole of the mounting yoke. Be sure to attach a **Safety Cable** to the fixture using the safety cable rigging point on the back of the fixture as illustrated below.

### **SECURING**

Regardless of the rigging option you choose for your fixture, always be sure to secure your fixture with a **Safety Cable**. The fixture provides a built-in rigging point for a **Safety Cable** on the back of the fixture as illustrated below. Be sure to only use the designated rigging point for the safety cable.

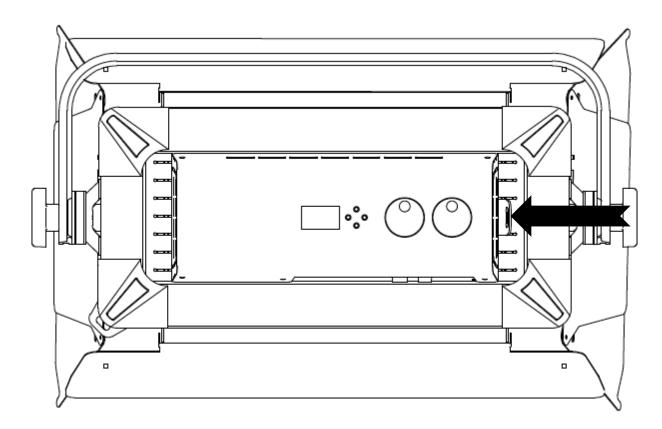

**SAFETY CABLE RIGGING POINT** 


## FIXTURE MENU

### **ON-BOARD SYSTEM MENU**

The fixture comes with an easy to navigate system menu. The next section will detail the functions of each command in the system menu.

### LCD MENU CONTROL PANEL

The control panel (see image below) located on back of the fixture allows you to access the main menu and make all necessary adjustments to the fixture. During normal operation, pressing **MENU** button once will access the fixture's main menu. Once in the main menu you can navigate through the different functions and access the sub-menus with the **UP** and **DOWN** buttons. Once you reach a field that requires adjusting, press the **ENTER** button to activate that field and use the **UP** and **DOWN** buttons to adjust the field. Pressing the **ENTER** button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing and holding the **MENU** button for 3 seconds.

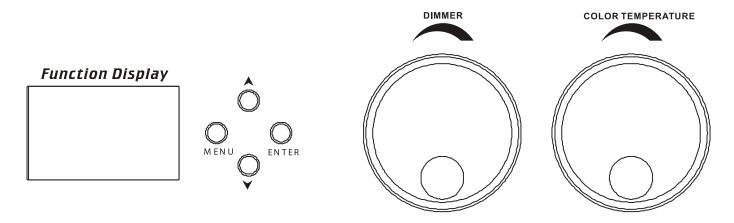

REP.

The MENU display will lock when NO buttons are pressed for 30 seconds. When the display locks, none of the control panel buttons will respond. To unlock the display, press and hold the MENU button 5 seconds to access the menu options once again



The DIMMER and COLOR TEMPERATURE control dials are disabled by default. To enable, press and hold the ENTER button down for 3 seconds.

#### ELATION TVL SOFTLIGHT DW™ SYSTEM MENU **Supports Software Versions:** ≥ V1.1 Features subject to change without any prior written notice. **SUB MENU OPTIONS / VALUES (Default Settings in BOLD) DESCRIPTION** MAIN MENU DMX Address **001** - 512 Set DMX Address Setting IP Address | 000.000.000.000 Set Fixture IP Address Ethernet IP Setup Subnet Mask | Set Fixture Subnet Mask Address 000.000.000.000 Art-Net Setup Net | 0-255 **DMX Setting** Art-Net Port Setup Subnet | 0-15 Set Art-NET port Settings Universe | 0-15 2 Channel, 3 Channel, 4 Channel, Channel Mode Select DMX Channel Mode 5 Channel, 6 Channel, 7 Channel **Primary**, Secondary Set Primary Mode **Primary Mode DMX Last** Define How Fixture Reacts When Primary Secondary, Blackout, Last Start NO DMX Signal Is Present State Dimmer Standard, Stage, TV, Architec, Theatre Set Dimming Curve Mode Curve Warm White 50-100 White Adjust White Balance Setting Balance Cool White 50-**100** Adjust LCD Control Display Contrast Contrast Ratio **15** (0 - 30) Display Backlight Auto No, Yes Set LCD Display Backlight Function Setting Off Invert Display No, Yes Flip LCD Control Display 180° Warm White 0 - **255** Manual Control DMX Values Manually Control Cool White 0 - 255 Fixture Time 0 (hours) Fixture CPU-A V Fixture Information Information Firmware Version CPU-B V Factory Reset to factory default settings No, Yes Setting

# **SYSTEM MENU CHANGE WITH SOFTWARE UPDATE VERSION 1.2**

See highlighted menu items below which have been updated with this software update.

|  |                    | ELATION   | TVL SOFTLIGHT DW™                                       | ·  |  |  |  |
|--|--------------------|---|---|--|--|--|--|
|  |                    | SY  | STEM MENU   |  |  |  |  |
|  |                    | Supports S  | oftware Versions: ≥ V1.2                                |  |  |  |  |
| Features subject to change without any prior written notice. |                    |   |   |  |  |  |  |
| MAIN MENU  | SUB MENU           | OPTIONS / VALUES                                    | (Default Settings in BOLD)                              | DESCRIPTION  |  |  |  |
|  | DMX Address        | <b>001</b> - 512                                    |   | Set DMX Address Setting  |  |  |  |
|  |                    | Ethernet IP Setup                                   | IP Address   000.000.000.000                            | Set Fixture IP Address   |  |  |  |
|  |                    |   | Subnet Mask   <b>255.000.000.000</b>                    | Set Fixture Subnet Mask Address  |  |  |  |
| DMX Setting  | Art-Net Setup      |   | Net   <b>0</b> -255                                     |  |  |  |  |
|  |                    | Art-Net Port Setup                                  | Subnet   <b>0</b> -15                                   | Set Art-NET port Settings  |  |  |  |
|  |                    |   | Universe   <b>0</b> -15                                 |  |  |  |  |
|  | Channel Mode       | 2 Channel, <b>3 Channel</b> , 5 Channel, 6 Channel, |   | Select DMX Channel Mode  |  |  |  |
| Slave Mode   | Master, Slave      |   |   | Set Slave Mode   |  |  |  |
| DMX Last<br>State  | Master Slave, Blad | ckout, Last Start                                   | Define How Fixture Reacts When NO DMX Signal Is Present |  |  |  |  |
| Dimmer<br>Curve<br>Setting                                   | Standard, Stage,   | TV, Architec, Theatre                               | Set Dimming Curve Mode                                  |  |  |  |  |
| Francis  | Refresh            | 900hz - 1500hz, 2500h<br>15000hz, 20000hz 250       | z, 4000hz, 5000hz, 10000hz,<br>00 <b>(900hz)</b>        | Refresh Frequency Rate Setting (Software version 1.2 or higher)  |  |  |  |
| Frequency  | Gamma              | <b>No</b> , 2.0, 2.2, 2.4, 2.8                      | Gamma Setting (Software version 1.2 or higher)          |  |  |  |  |
| White  | Warm White         | 50- <b>100</b>                                      |   | Adjust White Balance Setting   |  |  |  |
| Balance  | Cool White         | 50- <b>100</b>                                      |   |  |  |  |  |
|  | Contrast Ratio     | <b>10</b> (0 - 30)                                  |   | Adjust LCD Control Display Contrast<br>Level   |  |  |  |
| Display  | Backlight Auto Off | No, <b>Yes</b>                                      |   | Set LCD Display Backlight Function   |  |  |  |
| Setting  | Invert Display     | No, Yes   |   | Flip LCD Control Display 180°  |  |  |  |
|  | Lock               | On, Off   |   | When set to ON, the display shall lock 30 seconds after the last button press. When set to OFF, the display shall never lock |  |  |  |
| Manual Mode  | Warm White         | 0 - <b>255</b>                                      |   | Control DMV Values Menually  |  |  |  |
| iviariuai iviode   | Cool White         | 0 - <b>255</b>                                      |   | Control DMX Values Manually  |  |  |  |
| First  | Fixture Time       | 0 (hours)   |   | Fixture Information  |  |  |  |
| Fixture Information  | Firmware Version   | CPU-A: V  |   |  |  |  |  |
| Information  | Filliware version  | CPU-B: V  |   |  |  |  |  |
| Factory<br>Setting   |                    | No, Yes   |   | Reset to factory default settings  |  |  |  |

# **SYSTEM MENU CHANGE WITH SOFTWARE UPDATE VERSION 1.6**

See highlighted menu items below which have been updated with this software update.

|                            |                              | ELATION   | TVL SOFTLIGHT DW™                                       | occurred out access  |  |
|----------------------------|------------------------------|---|---|--|--|
|                            |                              |   | STEM MENU   |  |  |
|                            |                              |   | Software Versions: ≥ V1.6                               |  |  |
|                            |                              |   | nange without any prior written                         | I  |  |
| MAIN MENU                  | SUB MENU                     |   | (Default Settings in BOLD)                              | DESCRIPTION  |  |
|                            | DMX Address                  | <b>001</b> - 512                                    |   | Set DMX Address Setting  |  |
|                            |                              | Eth areat ID Cature                                 | IP Address   000.000.000.000                            | Set Fixture IP Address   |  |
|                            | A . N . O .                  | Ethernet IP Setup                                   | Subnet Mask   <b>255.000.000.000</b>                    | Set Fixture Subnet Mask Address  |  |
| DMX Setting                | Art-Net Setup                |   | Net   <b>0-127</b>                                      |  |  |
|                            |                              | Art-Net Port Setup                                  | Subnet   <b>0</b> -15                                   | Set Art-NET port Settings  |  |
|                            |                              |   | Universe   <b>0</b> -15                                 |  |  |
|                            | Channel Mode                 | 2 Channel, <b>3 Channel</b> , 5 Channel, 6 Channel, | Select DMX Channel Mode                                 |  |  |
| Pri/Sec Mode               | Primary, Secondry            | 1   |   | Set Secondary Mode   |  |
| DMX Last<br>State          | Pri Sec, Blackout,           | <b>Last</b> State                                   | Define How Fixture Reacts When NO DMX Signal Is Present |  |  |
| Dimmer<br>Curve<br>Setting | Standard, Stage,             | IV, Architec, Theatre                               | Set Dimming Curve Mode                                  |  |  |
| Frequency                  | Refresh                      | 900hz - 1500hz, 2500h<br>15000hz, 20000hz 250       | nz, 4000hz, 5000hz, 10000hz,<br>00hz <b>(900hz)</b>     | Refresh Frequency Rate Setting (Software version 1.2 or higher)  |  |
| Gamma                      | <b>No</b> , 2.0, 2.2, 2.4, 2 | .8  | Gamma Setting (Software version 1.2 or higher)          |  |  |
| White                      | Warm White                   | 50- <b>100</b>                                      |   | Adjust White Balance Setting   |  |
| Balance                    | Cool White                   | 50- <b>100</b>                                      |   |  |  |
|                            | Contrast Ratio               | <b>10</b> (1 - 30)                                  |   | Adjust LCD Control Display Contrast<br>Level   |  |
| Display                    | Backlight Auto<br>Off        | No, <b>Yes</b>                                      |   | Set LCD Display Backlight Function   |  |
| Setting                    | Invert Display               | No, Yes   |   | Flip LCD Control Display 180°  |  |
|                            | Lock                         | On, Off   |   | When set to ON, the display shall lock 30 seconds after the last button press. When set to OFF, the display shall never lock |  |
| Mararral Marala            | Warm White                   | 0 - <b>255</b>                                      |   | Octobel DMV Velices Messaglis  |  |
| Manual Mode                | Cool White                   | 0 - <b>255</b>                                      |   | Control DMX Values Manually  |  |
| F                          | Fixture Time                 | 0 (hours)   |   |  |  |
| Fixture<br>Information     | Firmer Vene!                 | CPU-A: V  |   | Fixture Information  |  |
| mormation                  | Firmware Version             | CPU-B: V  |   |  |  |
| Factory<br>Setting         |                              | No, Yes   |   | Reset to factory default settings  |  |

# DMX CHANNEL FUNCTIONS AND VALUES

| Supports Software Versions ≥: V1.0 |  |         |       |         |                            |                               |  |
|------------------------------------|--|---------|-------|---------|----------------------------|-------------------------------|--|
|                                    | Features subject to change without any prior written notice. |         |       |         |                            |                               |  |
|                                    | М  | DDE / C | CHANN | IEL     |                            | VALUE                         | FUNCTION                                     |
| 2                                  | 3  | 4       | 5     | 6       | 7                          | VALUE                         | FONCTION                                     |
|                                    | 1  |         | 1     | 1       | 1                          |                               |  |
|                                    | '  |         | '     | '       | '                          | 0-255                         | Warm White (0=Black - 255=100%) [255]        |
|                                    | 2  |         | 2     | 2       | 2                          |                               |  |
|                                    |  |         |       |         |                            | 0-255                         | Cool White (0=Black - 255=100%) [255]        |
|                                    |  |         |       |         |                            |                               |  |
| 1                                  |  | 1       |       |         | 3                          | 0                             | OFF  |
|                                    |  |         |       |         |                            | 1-255                         | 3,200K - 5,600K (0=Black - 255=100%) [127]   |
|                                    |  |         |       |         |                            |                               |  |
|                                    |  |         |       |         |                            | 0-31                          | LEDs OFF                                     |
|                                    | 3 4  |         |       |         | 32-63                      | LEDs ON                       |  |
|                                    |  |         |       | 64-95   | Strobe Effect SLOW to FAST |                               |  |
|                                    |  |         | 4     | 96-127  | LEDs ON                    |                               |  |
|                                    |  |         |       | 128-159 | Pulse Effect SLOW to FAST  |                               |  |
|                                    |  |         |       |         |                            | 160-191                       | LEDs ON                                      |
|                                    |  |         |       |         |                            | 192-223                       | Random Strobe SLOW to FAST                   |
|                                    |  |         |       |         |                            | 224-255                       | LED ON <b>[255]</b>                          |
| 2                                  | 3  | 2       | 3     | 4       | 5                          | 0-255                         |  |
|                                    |  |         |       |         |                            | 0-255                         | Intensity 0 to 100% <b>[0]</b>               |
|                                    |  | 3       | 4     | 5       | 6                          | 0-255                         | Dimmer Intensity FINE Adjustment [0]         |
|                                    |  |         |       |         |                            | 0-233                         | Diffiller litterisity Flive Adjustifient [V] |
|                                    |  |         |       |         |                            | 0-20                          | STANDARD [20]                                |
|                                    |  |         |       |         |                            | 21-40                         | STAGE  |
|                                    |  | 4       | 5     | 6       | 7                          | 41-60                         | TV   |
|                                    |  | i i     |       |         |                            | 61-80                         | ARCHITECTURAL                                |
|                                    |  |         |       | 81-100  | THEATRE                    |                               |  |
|                                    |  |         |       |         | 101-255                    | DEFAULT to UNIT CURVE SETTING |  |
|                                    | l  |         |       |         |                            |                               |  |

# CLEANING AND MAINTENANCE



CAUTION

Disconnect power before cleaning or maintenance.

### **CLEANING**

Frequent cleaning is recommended to insure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics.

 Clean the external lens surface at least every 20 days with a soft cloth to avoid dirt/debris accumulation. NEVER use alcohol, solvents, or ammonia-based cleaners.

### **MAINTENANCE**

Regular inspections are recommended to insure proper function and extended life.

There are no user serviceable parts inside this fixture, please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from your local Elation dealer.

Please refer to the following points during routine inspections:

- A detailed check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Ensure all screws and fasteners are securely tightened at all times. Lose screws
  may fall out during normal operation resulting in damage or injury as larger parts
  could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments. Never remove the ground prong from the power cable.

# TECHNICAL SPECIFICATIONS

### SOURCE

240 Cool White + 240 Warm White LEDs 20,000 Hour Average LED Life\*

\*May vary depending on several factors including but not limited to: Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control, and Dimming.

### **EFFECTS**

Selectable 16-Bit Dimming Curves and Electronic Strobe Linear Variable White Color Temp Presets (3,200K - 5,600K)

### **COLOR**

Cool White / Warm White

### **CONTROL / CONNECTIONS**

(6) DMX Channel Modes (7 Total Channels)

4 Button Control Panel

2 Rotary Control Dials (Dimmer and Color Temperature)

Adjustable Refresh Rate (900-25,000 Hz) Adjustable Gamma Brightness (2.0-2.8) 180° Reversible LCD Menu Display

5pin DMX In/Out

RJ45 Ethernet In (Art-NET)

IP65 Locking Power ConnectorIn

### SIZE / WEIGHT (w/barn doors attached)

Length: 26.5 (673mm) Width: 12.4" (314.5mm)

Vertical Height: 16.7" (425mm) Weight: 16.0 lbs. (7.3 kg)

### **ELECTRICAL / THERMAL**

AC 100-240V - 50/60Hz

99W Max Power Consumption


Max Ambient Temperature -32° to 104°F (0°C to 40°C)

### **APPROVALS / RATINGS**

CE | cETLus | IP20



## **DIMENSIONAL DRAWINGS**

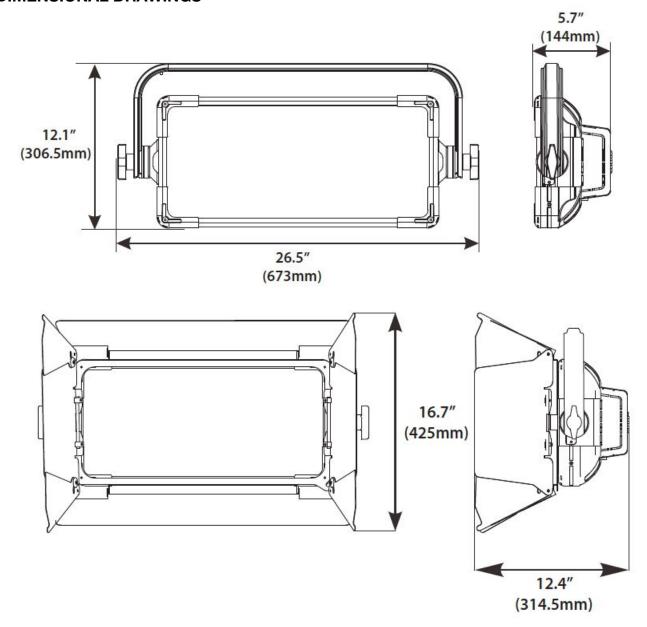

Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

# OPTIONAL ACCESSORIES

| ORDER CODE   | ITEM                               |
|--------------|------------------------------------|
| TVL562       | SNAPGRID 40° Light Control Grid    |
| NARROW CLAMP | Heavy Duty Wrap Around Clamp       |
| AC5PDMX5PRO  | 5 ft. (1.5m) 5pin PRO DMX Cable    |
| CAT005       | 5' (1.5m) CAT6 Ethernet Cable      |
|              | Additional Cable Lengths Available |