

 
 
 
# STEM **WALL**

## WALL MOUNT ARRAY SPEAKERPHONE

# USER GUIDE

# OVERVIEW

Whether sitting on a flat surface or mounted on a wall, the Stem Wall Array Speakerphone optimizes voice pickup to make any environment sound like a professional conference room. Equipped with 15 microphones that create 180 degrees of coverage aimed at the voice source, plus full-range speakers and subwoofers, the Stem Wall speakerphone ensures everybody has a voice.

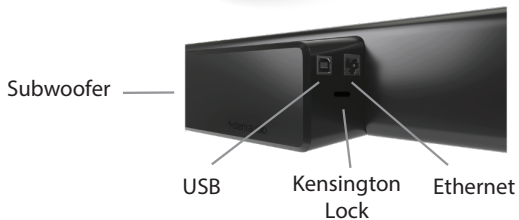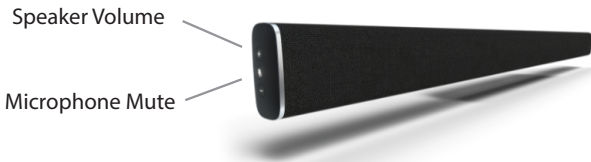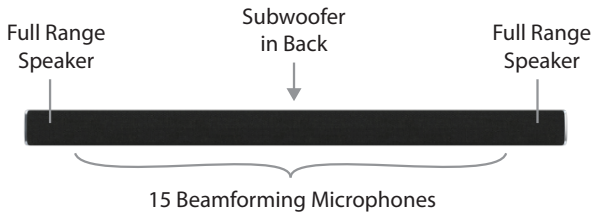

## Directional Array

During a call, proprietary beamforming technology steers the microphone array toward voices in the room, canceling out sources of noise. This provides superior intelligibility for the persons listening at the far-end of the call. Beamforming dynamically adjusts to changes, with blue indicator lights showing the direction of each audio beam as it detects and follows the voices in the room.

## Volume Control

 
Change the speaker volume using the + and - buttons on the top of the device.

### Mute Button




During a call, use the mute button on the top of the device to toggle the microphone on or off. When muted, the light ring on the device will slowly pulse red.


# MOUNTING

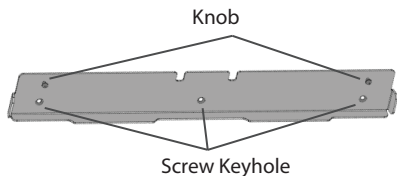

**Bracket**

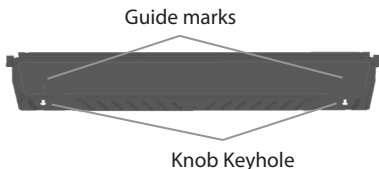 

**Device**

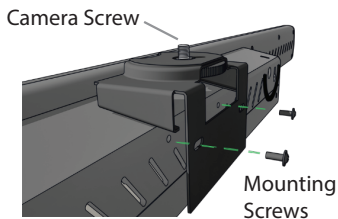 

**Camera Mount Accessory**

1. Identify the location of studs behind the mounting surface.
2. Using the provided magnetic level, place the bracket onto the surface and mark the keyhole locations.
3. Starting with the middle keyhole, use the provided screws (and anchors, if necessary) to affix the bracket to the surface.
4. If desired, attach the camera mount accessory to the back of the Wall device.
5. Mount the Wall device to the bracket, aligning the guide marks with the knobs and lightly pushing down to lock in place.

# SETTING UP

This device can be installed as a standalone unit or networked with other Stem Ecosystem™ devices using Stem Hub.

With either setup option, this device must be connected to a network port that supports PoE+. This connection provides the device with power, data, and other IoT and SIP capabilities.

**Note:** If your network doesn't support PoE+, you should purchase a separate PoE+ injector or PoE+ enabled switch.

For more information on setting up your room, visit [stemaudio.com/manuals](https://stemaudio.com/manuals) or [stemaudio.com/videos](https://stemaudio.com/videos).

## Standalone Setup

1. Place or mount the device in the desired location.
2. Connect the device to a network port that supports PoE+ using an Ethernet cable.
3. For video conferencing, connect the device to your PC using a USB Type B cable.
4. That's it! Your device is all set up to work as a standalone unit.

## Stem Ecosystem Setup

With a multi-device setup, Stem Hub is required. Hub enables all endpoints to communicate with each other and provides a single point of connection to external loudspeakers, Dante® networks, and other conferencing interfaces for all devices.

1. Place or mount the device in the desired location.
2. Connect the device to a network port that supports PoE+ using an Ethernet cable.
3. Install all other Stem devices, including Hub, to the same network.
4. Access the Stem Ecosystem Platform to configure your devices.
5. That's it! The device is now part of a Stem Ecosystem network.

## Stem Ecosystem Platform

We recommend using the Stem Ecosystem Platform for all installations.

Access the Stem Ecosystem Platform using Stem Control, through the apps available for iOS, Windows, and Android, or by typing in the product's IP address in a web browser.

# LIGHT GUIDE

Light Activity	Device Function
Slow red pulsing	Muted
Rapid red pulsing (~2 seconds)	Receiving ping
Solid red	Error
Single blue oscillating dot	Booting up
Solid blue receding from right to left	Restarting
Solid blue shifting	Testing and adapting to the environment
One or more steady blue dots	Shows direction of voice-activated beamforms

# WALL1 SPECIFICATIONS

- **Frequency response:** 50Hz – 16KHz
- **Broadcast level (peak):** 90dB SPL @ 1Khz from 1m (5 watts RMS)
- **Built-in Digital Signal Processing:**
  - **Noise cancellation:** >15dB (without pumping noise)
  - **Acoustic echo cancellation:** >40dB with conversion speed of 40dB/sec. Residual echo is suppressed to the environment noise level, preventing artificial ducking of signal.
  - Automatic voice-level adjustment (AGC)
  - 100% full duplex – no attenuation (in either direction) during full duplex
  - **High-end performance:** Conforms to ITU-T G.167.
- **Two subwoofers:** 10 watts (RMS) each
- **Two Full-Range Loudspeakers:** 4 watts (RMS) each
- **Weight:** 7.5 lbs. (3.4 kg)
- **Dimensions:** 48 x 3.5 x 3.25 (121.9 x 8.9 x 8.3 cm) L x D x H
- **Power Consumption:** PoE+ 802.3 at Type 2
- **Operating Systems:** Windows 98 and up / Linux / MacOS.



## Connectors

- **USB:** USB Type B
- **Ethernet:** RJ45 connector (requires PoE+)

## What's In The Box

- USB Type A to USB Type B Cable: 12 ft. (3.7 m)
- CAT 6 Ethernet Cable: 15 ft. (4.6 m)
- Mounting Bracket
- Magnetic Level
- Philips Head Screws with Anchors (3)
- Camera Mount Accessory Kit

## Certifications

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

**Industry Canada ICES-003 Compliance Label:** CAN ICES-3 (A)/NMB-3(A)

# IMPORTANT PRODUCT INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Please consider the environment, electric products and packaging are part of regional recycling schemes and do not belong to regular household waste.

# WARRANTY

The following warranty statement is effective for all Stem Audio products as of May 1st, 2019. Stem Audio ("the Manufacturer") warrants that this product is free of defects in both materials and workmanship. Should any part of this product be defective, the Manufacturer agrees, at its option, to repair or replace with a like-new replacement any defective part(s) free of charge (except transportation charges) for a period of two years for all products. This warranty period begins on the date the end-user is invoiced for the product, provided the end-user provides proof of purchase that the product is still within the warranty period and returns the product within the warranty period to Stem Audio or an authorized Stem Audio dealer according to the Product Return and Repair Policy listed below. All inbound shipping costs are the responsibility of the end-user, Stem Audio will be responsible for all outbound shipping costs.

## Product Return and Repair Policy

1. If purchased directly from Manufacturer (Stem Audio):

An RMA (Return Merchandise Authorization) number must be obtained by the end user from Stem Audio. Product serial number and proof of purchase must be presented in order to request an RMA number for a warranty claim. The end-user must return the product to Stem Audio and must display the RMA number of the outside of the shipping package.

2. If purchased through an authorized dealer, return to seller:

End-users should refer to seller's return policy. Seller may, at its discretion, provide an immediate exchange or may return the product to the Manufacturer for repair.

**THIS WARRANTY IS VOID IF:** The product has been damaged by negligence, accident, act of God, or mishandling, or has not been operated in accordance with the procedures described in the operating and technical instructions; or; The product has been altered or repaired by other than the manufacturer or an authorized service representative of the Manufacturer; or; Adaptations or accessories other than those manufactured or provided by the Manufacturer have been made or attached to the product which, in the determination of the Manufacturer, shall have affected the performance, safety or reliability of the product; or; The product's original serial number has been modified or removed.

**NO OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE, APPLIES TO THE PRODUCT. MANUFACTURER'S MAXIMUM LIABILITY HEREUNDER SHALL BE THE AMOUNT PAID BY THE END USER FOR THE PRODUCT.**

The Manufacturer shall not be liable for punitive, consequential, or incidental damages, expenses, or loss of revenue or property, inconvenience, or interruption in operation experienced by the end-user due to a malfunction in the purchased product. No warranty service performed on any product shall extend the applicable warranty period. This warranty extends only to the original end-user and is not assignable or transferable. This warranty is governed by the laws of the State of California.

For more information or technical support please refer to our website [www.stemaudio.com](http://www.stemaudio.com), email us at [customerservice@stemaudio.com](mailto:customerservice@stemaudio.com), or call (949) 877-7836.

## NEED SOME HELP?

**Website:** [stemaudio.com](http://stemaudio.com)

**Email:** [customerservice@stemaudio.com](mailto:customerservice@stemaudio.com)

**Telephone:** (949) 877-STEM (7836)

**Product Guides:** [stemaudio.com/manuals](http://stemaudio.com/manuals)

**Setup Videos:** [stemaudio.com/videos](http://stemaudio.com/videos)

**Additional Installation Resources:** [stemaudio.com](http://stemaudio.com)

