

elektroLite

Paint Can IP RGBW

Menu

Menu	Function
DMX-9CH D: 001	9CH DMX address, (001—512). Use the ↑ and ↓ buttons to choose the dmx address
DMX-5CH D: 001	5CH DMX address, (001—512) Use the ↑ and ↓ buttons to choose the dmx address
Col chase D: 00-99	Color change automatically with no fade between each step. Use the ↑ or ↓ buttons to change the speed of the color chase.
Col fade D: 00-99	Color change with a cross fade between steps. Use the ↑ or ↓ buttons to change the speed of the color chase.
Strobe D: 00-99	Strobe, (00—99) Use the ↑ or ↓ buttons to change the speed of the strobe rate.
Sound	Color change automatically by way of a sound input.
Color R D: 000 - 255	Red (000—255) ↑ and ↓ buttons will change the brightness
Color G D: 000 - 255	Green (000—255) ↑ and ↓ buttons will change the brightness
Color B D: 000 - 255	Blue (000—255) ↑ and ↓ buttons will change the brightness
Color W D: 000 - 255	White (000—255) ↑ and ↓ buttons will change the brightness
Zoom D: 000 - 255	Zoom (000—255) ↑ and ↓ buttons will change the beam size

9 DMX Channel (Profile).

Channel	Function	Description
1	Dimming	Total dimming from dark to bright
2	Strobe	Strobe from slow to fast
3	Chase	000 – 005 : Has no function 006 - 100: The chase snaps from one step to the next 101 – 150: The chase cross fades from one step to the next. 151 – 200: Strobe effect 201 – 255: Sound is activate and will moving the chase from one step to the next
4	Chase speed	Chase speed from slow to fast
5	Red	Red dimming
6	Green	Green dimming
7	Blue	Blue dimming
8	White	White dimming
9	Zoom	Zoom change in beam size

5 DMX Channel (Profile).

CH	Function	Description
1	Red	Red dimming
2	Green	Green dimming
3	Blue	Blue dimming
4	White	White dimming
5	zoom	Zoom change in beam size