

DMX CHANNEL			PARAMETER	DEFAULTS	RANGE DMX	DESCRIPTION
16-BIT & 16-BIT DECAY	8-BIT	COLOR MODE				
1	1		Intensity High	0	0-65535 (16bit) 0 - 255	Control of Dimming
2			Intensity Low			Fine Control of Dimming (16-BIT Only)
3	2	1	Red High	0	0-65535 (16bit) 0 - 255	Control of RED color
4			Red Low			Fine Control of RED color (16-BIT Only)
5	3	2	Green High	0	0-65535 (16bit) 0 - 255	Control of GREEN color
6			Green Low			Fine Control of Green color (16-BIT Only)
7	4	3	Blue High	0	0-65535 (16bit) 0 - 255	Control of BLUE color
8			Blue Low			Fine Control of BLUE color (16-BIT Only)
9	5	4	Amber High	0	0-65535 (16bit) 0 - 255	Control of AMBER color
10			Amber Low			Fine Control of AMBER color (16-BIT Only)
11	6		Color Preset	0	0 - 255 0 - 68 69 - 70 71 - 72 73 - 74 75 - 76 77 - 78 79 - 80 81 - 82 83 - 84 85 - 86 87 - 88 89 - 90 91 - 92 93 - 94 95 - 96 97 - 98 99 - 100 101 - 102 103 - 104 105 - 106 107 - 108 109 - 110 111 - 112 113 - 114 115 - 116 117 - 118 119 - 120 121 - 122	Access to preset colors Channel OFF (RGBA enabled) 0 - Color OFF 1 - White 10000K 2 - White 8000K 3 - White 6500K 4 - White 5600K 5 - White 5000K 6 - White 4500K 7 - White 4000K 8 - White 3200K 9 - White 3000K 10 - White 2700K 11 - Moroccan Pink 12 - Pink 13 - Flesh Pink 14 - Bright Rose 15 - Follies Pink 16 - Fuchsia Pink 17 - Surprise Pink 18 - Congo Blue 19 - Blue 20 - Virgin Blue 21 - Midnight Maya 22 - Double C.T. Blue 23 - Slate Blue 24 - Regal Blue 25 - Full C.T. Blue 26 - Steel Blue

DMX CHANNEL			PARAMETER	DEFAULTS	RANGE DMX	DESCRIPTION
16-BIT & 16-BIT DECAY	8-BIT	COLOR MODE				
11	6		Color Presets Continued	0	123 - 124	27 - Lighter Blue
					125 - 126	28 - Cyan
					127 - 128	29 - Marine Blue
					129 - 130	30 - Soft Green
					131 - 132	31 - Moss Green
					133 - 134	32 - Green
					135 - 136	33 - Fern Green
					137 - 138	34 - JAS Green
					139 - 140	35 - Pale Green
					141 - 142	36 - Spring Yellow
					143 - 144	37 - Yellow
					145 - 146	38 - Deep Amber
					147 - 148	39 - Chrome Orange
					149 - 150	40 - Orange
					151 - 152	41 - Magenta
					153 - 154	42 - Flame Red
					155 - 156	43 - Purple
157 - 187	Spin CW Fast --> Slow					
188 - 208	Spin CCW Fast --> Slow					
209 - 229	Random Color Fast --> Slow					
230 - 255	Channel Off					
12	7		Strobe Speed	0	0 - 255	.5hz to 30hz
13	8		Strobe Control	0	0 - 255	
					0 - 5	Open
					6 - 10	Closed
					11 - 15	Normal Strobe
					16 - 20	Random Strobe
					21 - 25	Random Sync Strobe
26 - 255	Reserved					
14	9		Control Channel	0	0 - 255	
					0 - 5	Idle (Default)
					6 - 10	Full Luminaire ReCal - also used to wake from shutdown
					11 - 20	Reserved
					21 - 25	Fixture Shutdown
					26 - 30	Display - Menu On
					31 - 35	Display - Menu Off
					36 - 40	Dimming Curve Linear
					41 - 45	Dimming Curve S-Curve
					46 - 50	Dimming Curve Square Curve (Default)
					51 - 60	Reserved
					61 - 65	Dimmer Snap On (Fast Snaps)
					66 - 70	Dimmer Snap Off (Default) (Smooth Dimming)
71 - 75	Color Calibration On					
76 - 80	Color Calibration Off (Default)					

DMX CHANNEL			PARAMETER	DEFAULTS	RANGE DMX	DESCRIPTION
16-BIT & 16-BIT DECAY	8-BIT	COLOR MODE				
14	9		Control Channel Continued	0	81 - 85 86 - 90 91 - 100 101 - 110 111 - 120 121 - 130 131 - 255	Standard Mode - Fixture operates at maximum output (Default) Studio Mode - Reduced output with lower fan speeds Whisper Mode - Reduced output with lowest fan speeds Reserved Fan On (Default) Fan Auto Reserved