

# DMX CHART



## Maverick Force 2 BeamWash

### DMX Values

#### Single Control Values

#### Tour (146 channels)

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Pan fine	000 ⇔ 255	0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Tilt fine	000 ⇔ 255	0–100%
5	CTC	000	No function
		001 ⇔ 255	Color temperature, 2800–10000K
6	Color macro	000	No function
		001 ⇔ 255	Color macros
7	Gobo	000	No function
		001 ⇔ 255	Gobos (indexed)
8	LED macro/ Auto program	000 ⇔ 015	No function
		016 ⇔ 135	LED macros
		136 ⇔ 255	Auto programs
9	LED macro/ Auto program speed	000 ⇔ 127	Auto speed, fast to slow
		128	Hold
		129 ⇔ 255	Auto speed, slow to fast
10	LED macro delay	000 ⇔ 255	Fast to slow
11	Background color	000	No function
		001 ⇔ 002	2700K R: 156 G: 118 B: 0 W: 63
		003 ⇔ 004	3200K R: 156 G: 141 B: 5 W: 89
		005 ⇔ 006	4200K R: 156 G: 141 B: 14 W: 255
		007 ⇔ 008	5600K R: 156 G: 207 B: 54 W: 255
		009 ⇔ 010	8000K R: 130 G: 255 B: 96 W: 255
		011	Blue R: 0 G: 0 B: 255 W: 0
		012 ⇔ 048	+ Green R: 0 G: 0–255 B: 255 W: 0
		049	Cyan R: 0 G: 255 B: 255 W: 0
		050 ⇔ 086	- Blue R: 0 G: 255 B: 255–0 W: 0
		087	Green R: 0 G: 255 B: 0 W: 0
		088 ⇔ 124	+ Red R: 0–255 G: 255 B: 0 W: 0
		125	Yellow R: 255 G: 255 B: 0 W: 0
		126 ⇔ 162	- Green R: 255 G: 255–0 B: 0 W: 0
		163	Red R: 255 G: 0 B: 0 W: 0
		164 ⇔ 200	+ Blue R: 255 G: 0 B: 0–255 W: 0
		201	Magenta R: 255 G: 0 B: 255 W: 0
		202 ⇔ 238	- Red R: 255–0 G: 0 B: 255 W: 0
239	Blue R: 0 G: 0 B: 255 W: 0		
240 ⇔ 247	Color fade, fast to slow		
248 ⇔ 255	Color snap, fast to slow		
12	Background dimmer	000 ⇔ 255	0–100%
13	Background fine dimmer	000 ⇔ 255	0–100%
14	Main dimmer	000 ⇔ 255	0–100%
15	Main fine dimmer	000 ⇔ 255	0–100%

Channel	Function	Value	Percent/Setting
16	Shutter	000 ⇔ 019	Off
		020 ⇔ 024	On
		025 ⇔ 064	Strobe, fast to slow
		065 ⇔ 069	On
		070 ⇔ 084	Strobe 100–0%, fast to slow
		085 ⇔ 089	On
		090 ⇔ 104	Strobe 0–100%, fast to slow
		105 ⇔ 109	On
		110 ⇔ 124	Random strobe, fast to slow
		125 ⇔ 129	On
		130 ⇔ 144	Random strobe 100–0%, fast to slow
		145 ⇔ 149	On
		150 ⇔ 164	Random strobe 0–100%, fast to slow
		165 ⇔ 169	On
		170 ⇔ 184	Pulse strobe, fast to slow
		185 ⇔ 189	On
		190 ⇔ 204	Random pulse strobe, fast to slow
		205 ⇔ 209	On
		210 ⇔ 224	Strobe 0–100–0%, fast to slow
		225 ⇔ 229	On
230 ⇔ 244	Random pulse strobe, fast to slow		
245 ⇔ 255	On		
17	Zoom	000 ⇔ 255	Wide to narrow
18	Control	000 ⇔ 009	No function
		010 ⇔ 014	Blackout on pan/tilt
		015 ⇔ 019	Reserved for future use
		020 ⇔ 024	RGBW color mixing mode
		025 ⇔ 029	CMY color mixing mode (R=C, G=M, B=Y)
		030 ⇔ 049	Reserved for future use
		050 ⇔ 054	Pan reset
		055 ⇔ 059	Tilt reset
		060 ⇔ 064	Zoom reset
		065 ⇔ 069	Reserved for future use
		070 ⇔ 074	Reset all
		075 ⇔ 109	Reserved for future use
		110 ⇔ 114	Fast pan/tilt speed
		115 ⇔ 119	Slow pan/tilt speed
		120 ⇔ 124	Slow fan mode
		125 ⇔ 129	Full fan mode
		130 ⇔ 134	Auto fan mode
		135 ⇔ 139	Fast dimmer mode
		140 ⇔ 144	Slow dimmer mode
		145 ⇔ 223	Reserved for future use
224 ⇔ 231	White mode on		
232 ⇔ 239	White mode off		
240 ⇔ 255	Reserved for future use		
19	Main red	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

## DMX CHART



### Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting
20	Main red fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
21	Main green	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
22	Main green fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
23	Main blue	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
24	Main blue fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
25	Main white	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
26	Main white fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
27	Dimmer 1	000 ⇔ 255	0–100%
28	Dimmer fine 1	000 ⇔ 255	0–100%
29	Red 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
30	Red fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
31	Green 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
32	Green fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
33	Blue 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
34	Blue fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
35	White 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
36	White fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
37	Dimmer 2	000 ⇔ 255	0–100%
38	Dimmer fine 2	000 ⇔ 255	0–100%
39	Red 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
40	Red fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
41	Green 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
42	Green fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
43	Blue 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
44	Blue fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
45	White 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
46	White fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
47	Dimmer 3	000 ⇔ 255	0–100%
48	Dimmer fine 3	000 ⇔ 255	0–100%
49	Red 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
50	Red fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
51	Green 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
52	Green fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
53	Blue 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
54	Blue fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
55	White 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
56	White fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
57	Dimmer 4	000 ⇔ 255	0–100%
58	Dimmer fine 4	000 ⇔ 255	0–100%
59	Red 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
60	Red fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
61	Green 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
62	Green fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
63	Blue 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
64	Blue fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
65	White 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
66	White fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

Channel	Function	Value	Percent/Setting
67	Dimmer 5	000 ⇄ 255	0–100%
68	Dimmer fine 5	000 ⇄ 255	0–100%
69	Red 5	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
70	Red fine 5	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
71	Green 5	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
72	Green fine 5	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
73	Blue 5	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
74	Blue fine 5	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
75	White 5	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
76	White fine 5	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
77	Dimmer 6	000 ⇄ 255	0–100%
78	Dimmer fine 6	000 ⇄ 255	0–100%
79	Red 6	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
80	Red fine 6	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
81	Green 6	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
82	Green fine 6	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
83	Blue 6	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
84	Blue fine 6	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
85	White 6	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
86	White fine 6	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
87	Dimmer 7	000 ⇄ 255	0–100%
88	Dimmer fine 7	000 ⇄ 255	0–100%
89	Red 7	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
90	Red fine 7	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
91	Green 7	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
92	Green fine 7	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
93	Blue 7	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
94	Blue fine 7	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
95	White 7	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
96	White fine 7	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
97	Dimmer 8	000 ⇄ 255	0–100%
98	Dimmer fine 8	000 ⇄ 255	0–100%
99	Red 8	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
100	Red fine 8	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
101	Green 8	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
102	Green fine 8	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
103	Blue 8	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
104	Blue fine 8	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
105	White 8	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
106	White fine 8	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
107	Dimmer 9	000 ⇄ 255	0–100%
108	Dimmer fine 9	000 ⇄ 255	0–100%
109	Red 9	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
110	Red fine 9	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
111	Green 9	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
112	Green fine 9	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
113	Blue 9	000 ⇄ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

## DMX CHART



### Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting
114	Blue fine 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
115	White 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
116	White fine 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
117	Dimmer 10	000 ⇔ 255	0–100%
118	Dimmer fine 10	000 ⇔ 255	0–100%
119	Red 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
120	Red fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
121	Green 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
122	Green fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
123	Blue 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
124	Blue fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
125	White 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
126	White fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
127	Dimmer 11	000 ⇔ 255	0–100%
128	Dimmer fine 11	000 ⇔ 255	0–100%
129	Red 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
130	Red fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
131	Green 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
132	Green fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
133	Blue 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
134	Blue fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
135	White 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
136	White fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
137	Dimmer 12	000 ⇔ 255	0–100%
138	Dimmer fine 12	000 ⇔ 255	0–100%
139	Red 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
140	Red fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
141	Green 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
142	Green fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
143	Blue 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
144	Blue fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
145	White 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
146	White fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

### Advanced (122 channels)

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Pan fine	000 ⇔ 255	0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Tilt fine	000 ⇔ 255	0–100%
5	CTC	000	No function
		001 ⇔ 255	Color temperature, 2800–10000K
6	Color macro	000	No function
		001 ⇔ 255	Color macros
7	Gobo	000	No function
		001 ⇔ 255	Gobos (indexed)
8	LED macro/ Auto program	000 ⇔ 015	No function
		016 ⇔ 135	LED macros
		136 ⇔ 255	Auto programs
9	LED macro/ Auto program speed	000 ⇔ 127	Auto speed, fast to slow
		128	Hold
		129 ⇔ 255	Auto speed, slow to fast
10	LED macro delay	000 ⇔ 255	Fast to slow
11	Background color	000	No function
		001 ⇔ 002	2700K R: 156 G: 118 B: 0 W: 63
		003 ⇔ 004	3200K R: 156 G: 141 B: 5 W: 89
		005 ⇔ 006	4200K R: 156 G: 141 B: 14 W: 255
		007 ⇔ 008	5600K R: 156 G: 207 B: 54 W: 255
		009 ⇔ 010	8000K R: 130 G: 255 B: 96 W: 255
		011	Blue R: 0 G: 0 B: 255 W: 0
		012 ⇔ 048	+ Green R: 0 G: 0–255 B: 255 W: 0
		049	Cyan R: 0 G: 255 B: 255 W: 0
		050 ⇔ 086	- Blue R: 0 G: 255 B: 255–0 W: 0
		087	Green R: 0 G: 255 B: 0 W: 0
		088 ⇔ 124	+ Red R: 0–255 G: 255 B: 0 W: 0
		125	Yellow R: 255 G: 255 B: 0 W: 0
		126 ⇔ 162	- Green R: 255 G: 255–0 B: 0 W: 0
		163	Red R: 255 G: 0 B: 0 W: 0
		164 ⇔ 200	+ Blue R: 255 G: 0 B: 0–255 W: 0
		201	Magenta R: 255 G: 0 B: 255 W: 0
		202 ⇔ 238	- Red R: 255–0 G: 0 B: 255 W: 0
		239	Blue R: 0 G: 0 B: 255 W: 0
		240 ⇔ 247	Color fade, fast to slow
248 ⇔ 255	Color snap, fast to slow		
12	Background dimmer	000 ⇔ 255	0–100%
13	Background fine dimmer	000 ⇔ 255	0–100%
14	Main dimmer	000 ⇔ 255	0–100%
15	Main fine dimmer	000 ⇔ 255	0–100%

# DMX CHART



## Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting
16	Shutter	000 ⇔ 019	Off
		020 ⇔ 024	On
		025 ⇔ 064	Strobe, fast to slow
		065 ⇔ 069	On
		070 ⇔ 084	Strobe 100–0%, fast to slow
		085 ⇔ 089	On
		090 ⇔ 104	Strobe 0–100%, fast to slow
		105 ⇔ 109	On
		110 ⇔ 124	Random strobe, fast to slow
		125 ⇔ 129	On
		130 ⇔ 144	Random strobe 100–0%, fast to slow
		145 ⇔ 149	On
		150 ⇔ 164	Random strobe 0–100%, fast to slow
		165 ⇔ 169	On
		170 ⇔ 184	Pulse strobe, fast to slow
		185 ⇔ 189	On
		190 ⇔ 204	Random pulse strobe, fast to slow
		205 ⇔ 209	On
210 ⇔ 224	Strobe 0–100–0%, fast to slow		
225 ⇔ 229	On		
230 ⇔ 244	Random pulse strobe, fast to slow		
245 ⇔ 255	On		
17	Zoom	000 ⇔ 255	Wide to narrow
18	Control	000 ⇔ 009	No function
		010 ⇔ 014	Blackout on pan/tilt
		015 ⇔ 019	Reserved for future use
		020 ⇔ 024	RGBW color mixing mode
		025 ⇔ 029	CMY color mixing mode (R=C, G=M, B=Y)
		030 ⇔ 049	Reserved for future use
		050 ⇔ 054	Pan reset
		055 ⇔ 059	Tilt reset
		060 ⇔ 064	Zoom reset
		065 ⇔ 069	Reserved for future use
		070 ⇔ 074	Reset all
		075 ⇔ 109	Reserved for future use
		110 ⇔ 114	Fast pan/tilt speed
		115 ⇔ 119	Slow pan/tilt speed
		120 ⇔ 124	Slow fan mode
		125 ⇔ 129	Full fan mode
		130 ⇔ 134	Auto fan mode
		135 ⇔ 139	Fast dimmer mode
		140 ⇔ 144	Slow dimmer mode
		145 ⇔ 223	Reserved for future use
		224 ⇔ 231	White mode on
232 ⇔ 239	White mode off		
240 ⇔ 255	Reserved for future use		
19	Main red	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%



Channel	Function	Value	Percent/Setting
20	Main red fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
21	Main green	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
22	Main green fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
23	Main blue	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
24	Main blue fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
25	Main white	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
26	Main white fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
27	Red 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
28	Red fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
29	Green 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
30	Green fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
31	Blue 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
32	Blue fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
33	White 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
34	White fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
35	Red 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
36	Red fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
37	Green 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
38	Green fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
39	Blue 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
40	Blue fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
41	White 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
42	White fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
43	Red 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
44	Red fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
45	Green 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
46	Green fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
47	Blue 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
48	Blue fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
49	White 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
50	White fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
51	Red 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
52	Red fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
53	Green 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
54	Green fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
55	Blue 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
56	Blue fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
57	White 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
58	White fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
59	Red 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
60	Red fine 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
61	Green 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
62	Green fine 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
63	Blue 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
64	Blue fine 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
65	White 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
66	White fine 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%



## DMX CHART



### Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting
67	Red 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
68	Red fine 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
69	Green 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
70	Green fine 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
71	Blue 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
72	Blue fine 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
73	White 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
74	White fine 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
75	Red 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
76	Red fine 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
77	Green 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
78	Green fine 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
79	Blue 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
80	Blue fine 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
81	White 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
82	White fine 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
83	Red 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
84	Red fine 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
85	Green 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
86	Green fine 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
87	Blue 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
88	Blue fine 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
89	White 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
90	White fine 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
91	Red 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
92	Red fine 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
93	Green 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
94	Green fine 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
95	Blue 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
96	Blue fine 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
97	White 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
98	White fine 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
99	Red 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
100	Red fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
101	Green 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
102	Green fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
103	Blue 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
104	Blue fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
105	White 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
106	White fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
107	Red 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
108	Red fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
109	Green 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
110	Green fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
111	Blue 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
112	Blue fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
113	White 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

Channel	Function	Value	Percent/Setting
114	White fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
115	Red 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
116	Red fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
117	Green 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
118	Green fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
119	Blue 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
120	Blue fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
121	White 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
122	White fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

**Standard (68 channels)**

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Pan fine	000 ⇔ 255	0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Tilt fine	000 ⇔ 255	0–100%
5	CTC	000	No function
		001 ⇔ 255	Color temperature, 2800–10000K
6	Color macro	000	No function
		001 ⇔ 255	Color macros
7	Gobo	000	No function
		001 ⇔ 255	Gobos (indexed)
8	LED macro/ Auto program	000 ⇔ 015	No function
		016 ⇔ 135	LED macros
		136 ⇔ 255	Auto programs
9	LED macro/ Auto program speed	000 ⇔ 127	Auto speed, fast to slow
		128	Hold
		129 ⇔ 255	Auto speed, slow to fast
10	LED macro delay	000 ⇔ 255	Fast to slow

# DMX CHART



## Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting						
11	Background color	000	No function						
		001 ⇔ 002	2700K	R: 156	G: 118	B: 0	W: 63		
		003 ⇔ 004	3200K	R: 156	G: 141	B: 5	W: 89		
		005 ⇔ 006	4200K	R: 156	G: 141	B: 14	W: 255		
		007 ⇔ 008	5600K	R: 156	G: 207	B: 54	W: 255		
		009 ⇔ 010	8000K	R: 130	G: 255	B: 96	W: 255		
		011	Blue	R: 0	G: 0	B: 255	W: 0		
		012 ⇔ 048	+ Green	R: 0	G: 0–255	B: 255	W: 0		
		049	Cyan	R: 0	G: 255	B: 255	W: 0		
		050 ⇔ 086	- Blue	R: 0	G: 255	B: 255–0	W: 0		
		087	Green	R: 0	G: 255	B: 0	W: 0		
		088 ⇔ 124	+ Red	R: 0–255	G: 255	B: 0	W: 0		
		125	Yellow	R: 255	G: 255	B: 0	W: 0		
		126 ⇔ 162	- Green	R: 255	G: 255–0	B: 0	W: 0		
		163	Red	R: 255	G: 0	B: 0	W: 0		
		164 ⇔ 200	+ Blue	R: 255	G: 0	B: 0–255	W: 0		
		201	Magenta	R: 255	G: 0	B: 255	W: 0		
		202 ⇔ 238	- Red	R: 255–0	G: 0	B: 255	W: 0		
		239	Blue	R: 0	G: 0	B: 255	W: 0		
		240 ⇔ 247	Color fade, fast to slow						
		248 ⇔ 255	Color snap, fast to slow						
		12	Background dimmer	000 ⇔ 255	0–100%				
		13	Main dimmer	000 ⇔ 255	0–100%				
		14	Shutter	000 ⇔ 019	Off				
020 ⇔ 024	On								
025 ⇔ 064	Strobe, fast to slow								
065 ⇔ 069	On								
070 ⇔ 084	Strobe 100–0%, fast to slow								
085 ⇔ 089	On								
090 ⇔ 104	Strobe 0–100%, fast to slow								
105 ⇔ 109	On								
110 ⇔ 124	Random strobe, fast to slow								
125 ⇔ 129	On								
130 ⇔ 144	Random strobe 100–0%, fast to slow								
145 ⇔ 149	On								
150 ⇔ 164	Random strobe 0–100%, fast to slow								
165 ⇔ 169	On								
170 ⇔ 184	Pulse strobe, fast to slow								
185 ⇔ 189	On								
190 ⇔ 204	Random pulse strobe, fast to slow								
205 ⇔ 209	On								
210 ⇔ 224	Strobe 0–100–0%, fast to slow								
225 ⇔ 229	On								
230 ⇔ 244	Random pulse strobe, fast to slow								
245 ⇔ 255	On								
15	Zoom	000 ⇔ 255	Wide to narrow						

Channel	Function	Value	Percent/Setting
16	Control	000 ⇔ 009	No function
		010 ⇔ 014	Blackout on pan/tilt
		015 ⇔ 019	Reserved for future use
		020 ⇔ 024	RGBW color mixing mode
		025 ⇔ 029	CMY color mixing mode (R=C, G=M, B=Y)
		030 ⇔ 049	Reserved for future use
		050 ⇔ 054	Pan reset
		055 ⇔ 059	Tilt reset
		060 ⇔ 064	Zoom reset
		065 ⇔ 069	Reserved for future use
		070 ⇔ 074	Reset all
		075 ⇔ 109	Reserved for future use
		110 ⇔ 114	Fast pan/tilt speed
		115 ⇔ 119	Slow pan/tilt speed
		120 ⇔ 124	Slow fan mode
		125 ⇔ 129	Full fan mode
		130 ⇔ 134	Auto fan mode
		135 ⇔ 139	Fast dimmer mode
		140 ⇔ 144	Slow dimmer mode
		145 ⇔ 223	Reserved for future use
		224 ⇔ 231	White mode on
		232 ⇔ 239	White mode off
		240 ⇔ 255	Reserved for future use
17	Main red	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
18	Main green	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
19	Main blue	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
20	Main white	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
21	Red 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
22	Green 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
23	Blue 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
24	White 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
25	Red 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
26	Green 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
27	Blue 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
28	White 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
29	Red 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
30	Green 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
31	Blue 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
32	White 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
33	Red 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
34	Green 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
35	Blue 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
36	White 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
37	Red 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
38	Green 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
39	Blue 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
40	White 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

## DMX CHART



### Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting
41	Red 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
42	Green 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
43	Blue 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
44	White 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
45	Red 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
46	Green 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
47	Blue 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
48	White 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
49	Red 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
50	Green 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
51	Blue 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
52	White 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
53	Red 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
54	Green 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
55	Blue 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
56	White 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
57	Red 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
58	Green 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
59	Blue 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
60	White 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
61	Red 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
62	Green 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
63	Blue 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
64	White 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
65	Red 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
66	Green 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
67	Blue 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
68	White 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

### Basic 2 (25 channels)

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Pan fine	000 ⇔ 255	0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Tilt fine	000 ⇔ 255	0–100%
5	CTC	000	No function
		001 ⇔ 255	Color temperature, 2800–10000K
6	Color macro	000	No function
		001 ⇔ 255	Color macros
7	Gobo	000	No function
		001 ⇔ 255	Gobos (indexed)
8	LED macro/ Auto program	000 ⇔ 015	No function
		016 ⇔ 135	LED macros
		136 ⇔ 255	Auto programs

Channel	Function	Value	Percent/Setting				
9	LED macro/ Auto program speed	000 ⇔ 127	Auto speed, fast to slow				
		128	Hold				
		129 ⇔ 255	Auto speed, slow to fast				
10	LED macro delay	000 ⇔ 255	Fast to slow				
11	Background color	000	No function				
		001 ⇔ 002	2700K	R: 156	G: 118	B: 0	W: 63
		003 ⇔ 004	3200K	R: 156	G: 141	B: 5	W: 89
		005 ⇔ 006	4200K	R: 156	G: 141	B: 14	W: 255
		007 ⇔ 008	5600K	R: 156	G: 207	B: 54	W: 255
		009 ⇔ 010	8000K	R: 130	G: 255	B: 96	W: 255
		011	Blue	R: 0	G: 0	B: 255	W: 0
		012 ⇔ 048	+ Green	R: 0	G: 0–255	B: 255	W: 0
		049	Cyan	R: 0	G: 255	B: 255	W: 0
		050 ⇔ 086	- Blue	R: 0	G: 255	B: 255–0	W: 0
		087	Green	R: 0	G: 255	B: 0	W: 0
		088 ⇔ 124	+ Red	R: 0–255	G: 255	B: 0	W: 0
		125	Yellow	R: 255	G: 255	B: 0	W: 0
		126 ⇔ 162	- Green	R: 255	G: 255–0	B: 0	W: 0
		163	Red	R: 255	G: 0	B: 0	W: 0
		164 ⇔ 200	+ Blue	R: 255	G: 0	B: 0–255	W: 0
		201	Magenta	R: 255	G: 0	B: 255	W: 0
		202 ⇔ 238	- Red	R: 255–0	G: 0	B: 255	W: 0
		239	Blue	R: 0	G: 0	B: 255	W: 0
		240 ⇔ 247	Color fade, fast to slow				
248 ⇔ 255	Color snap, fast to slow						
12	Background dimmer	000 ⇔ 255	0–100%				
13	Main dimmer	000 ⇔ 255	0–100%				
14	Main fine dimmer	000 ⇔ 255	0–100%				



## DMX CHART



### Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting
15	Shutter	000 ⇔ 019	Off
		020 ⇔ 024	On
		025 ⇔ 064	Strobe, fast to slow
		065 ⇔ 069	On
		070 ⇔ 084	Strobe 100–0%, fast to slow
		085 ⇔ 089	On
		090 ⇔ 104	Strobe 0–100%, fast to slow
		105 ⇔ 109	On
		110 ⇔ 124	Random strobe, fast to slow
		125 ⇔ 129	On
		130 ⇔ 144	Random strobe 100–0%, fast to slow
		145 ⇔ 149	On
		150 ⇔ 164	Random strobe 0–100%, fast to slow
		165 ⇔ 169	On
		170 ⇔ 184	Pulse strobe, fast to slow
		185 ⇔ 189	On
		190 ⇔ 204	Random pulse strobe, fast to slow
		205 ⇔ 209	On
210 ⇔ 224	Strobe 0–100–0%, fast to slow		
225 ⇔ 229	On		
230 ⇔ 244	Random pulse strobe, fast to slow		
245 ⇔ 255	On		
16	Zoom	000 ⇔ 255	Wide to narrow
17	Control	000 ⇔ 009	No function
		010 ⇔ 014	Blackout on pan/tilt
		015 ⇔ 019	Reserved for future use
		020 ⇔ 024	RGBW color mixing mode
		025 ⇔ 029	CMY color mixing mode (R=C, G=M, B=Y)
		030 ⇔ 049	Reserved for future use
		050 ⇔ 054	Pan reset
		055 ⇔ 059	Tilt reset
		060 ⇔ 064	Zoom reset
		065 ⇔ 069	Reserved for future use
		070 ⇔ 074	Reset all
		075 ⇔ 109	Reserved for future use
		110 ⇔ 114	Fast pan/tilt speed
		115 ⇔ 119	Slow pan/tilt speed
		120 ⇔ 124	Slow fan mode
		125 ⇔ 129	Full fan mode
		130 ⇔ 134	Auto fan mode
		135 ⇔ 139	Fast dimmer mode
		140 ⇔ 144	Slow dimmer mode
		145 ⇔ 223	Reserved for future use
224 ⇔ 231	White mode on		
232 ⇔ 239	White mode off		
240 ⇔ 255	Reserved for future use		
18	Main red	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

Channel	Function	Value	Percent/Setting
19	Main red fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
20	Main green	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
21	Main green fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
22	Main blue	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
23	Main blue fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
24	Main white	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
25	Main white fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

### Basic (20 channels)

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Pan fine	000 ⇔ 255	0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Tilt fine	000 ⇔ 255	0–100%
5	CTC	000	No function
		001 ⇔ 255	Color temperature, 2800–10000K
6	Color macro	000	No function
		001 ⇔ 255	Color macros
7	Gobo	000	No function
		001 ⇔ 255	Gobos (indexed)
8	LED macro/ Auto program	000 ⇔ 015	No function
		016 ⇔ 135	LED macros
		136 ⇔ 255	Auto programs
9	LED macro/ Auto program speed	000 ⇔ 127	Auto speed, fast to slow
		128	Hold
		129 ⇔ 255	Auto speed, slow to fast
10	LED macro delay	000 ⇔ 255	Fast to slow

# DMX CHART




## Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting						
11	Background color	000	No function						
		001 ⇔ 002	2700K	R: 156	G: 118	B: 0	W: 63		
		003 ⇔ 004	3200K	R: 156	G: 141	B: 5	W: 89		
		005 ⇔ 006	4200K	R: 156	G: 141	B: 14	W: 255		
		007 ⇔ 008	5600K	R: 156	G: 207	B: 54	W: 255		
		009 ⇔ 010	8000K	R: 130	G: 255	B: 96	W: 255		
		011	Blue	R: 0	G: 0	B: 255	W: 0		
		012 ⇔ 048	+ Green	R: 0	G: 0–255	B: 255	W: 0		
		049	Cyan	R: 0	G: 255	B: 255	W: 0		
		050 ⇔ 086	- Blue	R: 0	G: 255	B: 255–0	W: 0		
		087	Green	R: 0	G: 255	B: 0	W: 0		
		088 ⇔ 124	+ Red	R: 0–255	G: 255	B: 0	W: 0		
		125	Yellow	R: 255	G: 255	B: 0	W: 0		
		126 ⇔ 162	- Green	R: 255	G: 255–0	B: 0	W: 0		
		163	Red	R: 255	G: 0	B: 0	W: 0		
		164 ⇔ 200	+ Blue	R: 255	G: 0	B: 0–255	W: 0		
		201	Magenta	R: 255	G: 0	B: 255	W: 0		
		202 ⇔ 238	- Red	R: 255–0	G: 0	B: 255	W: 0		
		239	Blue	R: 0	G: 0	B: 255	W: 0		
		240 ⇔ 247	Color fade, fast to slow						
		248 ⇔ 255	Color snap, fast to slow						
		12	Background dimmer	000 ⇔ 255	0–100%				
		13	Main dimmer	000 ⇔ 255	0–100%				
		14	Shutter	000 ⇔ 019	Off				
020 ⇔ 024	On								
025 ⇔ 064	Strobe, fast to slow								
065 ⇔ 069	On								
070 ⇔ 084	Strobe 100–0%, fast to slow								
085 ⇔ 089	On								
090 ⇔ 104	Strobe 0–100%, fast to slow								
105 ⇔ 109	On								
110 ⇔ 124	Random strobe, fast to slow								
125 ⇔ 129	On								
130 ⇔ 144	Random strobe 100–0%, fast to slow								
145 ⇔ 149	On								
150 ⇔ 164	Random strobe 0–100%, fast to slow								
165 ⇔ 169	On								
170 ⇔ 184	Pulse strobe, fast to slow								
185 ⇔ 189	On								
190 ⇔ 204	Random pulse strobe, fast to slow								
205 ⇔ 209	On								
210 ⇔ 224	Strobe 0–100–0%, fast to slow								
225 ⇔ 229	On								
230 ⇔ 244	Random pulse strobe, fast to slow								
245 ⇔ 255	On								
15	Zoom	000 ⇔ 255	Wide to narrow						

Channel	Function	Value	Percent/Setting
16	Control	000 ⇔ 009	No function
		010 ⇔ 014	Blackout on pan/tilt
		015 ⇔ 019	Reserved for future use
		020 ⇔ 024	RGBW color mixing mode
		025 ⇔ 029	CMY color mixing mode (R=C, G=M, B=Y)
		030 ⇔ 049	Reserved for future use
		050 ⇔ 054	Pan reset
		055 ⇔ 059	Tilt reset
		060 ⇔ 064	Zoom reset
		065 ⇔ 069	Reserved for future use
		070 ⇔ 074	Reset all
		075 ⇔ 109	Reserved for future use
		110 ⇔ 114	Fast pan/tilt speed
		115 ⇔ 119	Slow pan/tilt speed
		120 ⇔ 124	Slow fan mode
		125 ⇔ 129	Full fan mode
		130 ⇔ 134	Auto fan mode
		135 ⇔ 139	Fast dimmer mode
		140 ⇔ 144	Slow dimmer mode
		145 ⇔ 223	Reserved for future use
224 ⇔ 231	White mode on		
232 ⇔ 239	White mode off		
240 ⇔ 255	Reserved for future use		
17	Main red	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
18	Main green	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
19	Main blue	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
20	Main white	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

### Pixel Chart

Rear panel

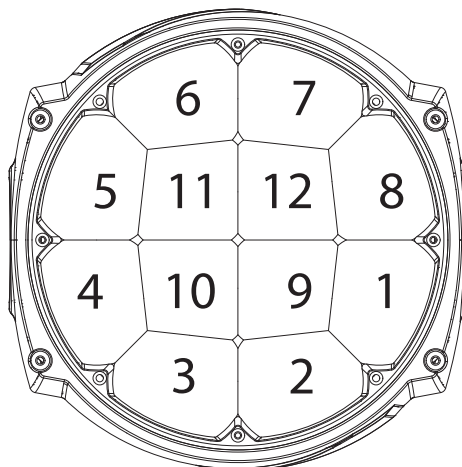

Front panel

## DMX CHART



### Maverick Force 2 BeamWash

#### Dual Control Movement Values Advanced (26 channels)

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Pan fine	000 ⇔ 255	0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Tilt fine	000 ⇔ 255	0–100%
5	CTC	000	No function
		001 ⇔ 255	Color temperature, 2800–10000 K
6	Color macro	000	No function
		001 ⇔ 255	Color macros
7	Gobo	000	No function
		001 ⇔ 255	Gobos (indexed)
8	LED macro/ Auto program	000 ⇔ 015	No function
		016 ⇔ 135	LED macros
		136 ⇔ 255	Auto programs
9	LED macro/ Auto program speed	000 ⇔ 127	Auto speed, fast to slow
		128	Hold
		129 ⇔ 255	Auto speed, slow to fast
10	LED macro delay	000 ⇔ 255	Fast to slow
11	Background color	000	No function
		001 ⇔ 002	2700K    R: 156    G: 118    B: 0    W: 63
		003 ⇔ 004	3200K    R: 156    G: 141    B: 5    W: 89
		005 ⇔ 006	4200K    R: 156    G: 141    B: 14    W: 255
		007 ⇔ 008	5600K    R: 156    G: 207    B: 54    W: 255
		009 ⇔ 010	8000K    R: 130    G: 255    B: 96    W: 255
		011	Blue    R: 0    G: 0    B: 255    W: 0
		012 ⇔ 048	+ Green    R: 0    G: 0–255    B: 255    W: 0
		049	Cyan    R: 0    G: 255    B: 255    W: 0
		050 ⇔ 086	- Blue    R: 0    G: 255    B: 255–0    W: 0
		087	Green    R: 0    G: 255    B: 0    W: 0
		088 ⇔ 124	+ Red    R: 0–255    G: 255    B: 0    W: 0
		125	Yellow    R: 255    G: 255    B: 0    W: 0
		126 ⇔ 162	- Green    R: 255    G: 255–0    B: 0    W: 0
		163	Red    R: 255    G: 0    B: 0    W: 0
		164 ⇔ 200	+ Blue    R: 255    G: 0    B: 0–255    W: 0
		201	Magenta    R: 255    G: 0    B: 255    W: 0
		202 ⇔ 238	- Red    R: 255–0    G: 0    B: 255    W: 0
		239	Blue    R: 0    G: 0    B: 255    W: 0
		240 ⇔ 247	Color fade, fast to slow
248 ⇔ 255	Color snap, fast to slow		
12	Background dimmer	000 ⇔ 255	0–100%
13	Background fine dimmer	000 ⇔ 255	0–100%
14	Main dimmer	000 ⇔ 255	0–100%
15	Main fine dimmer	000 ⇔ 255	0–100%

Channel	Function	Value	Percent/Setting
16	Shutter	000 ⇔ 019	Off
		020 ⇔ 024	On
		025 ⇔ 064	Strobe, fast to slow
		065 ⇔ 069	On
		070 ⇔ 084	Strobe 100–0%, fast to slow
		085 ⇔ 089	On
		090 ⇔ 104	Strobe 0–100%, fast to slow
		105 ⇔ 109	On
		110 ⇔ 124	Random strobe, fast to slow
		125 ⇔ 129	On
		130 ⇔ 144	Random strobe 100–0%, fast to slow
		145 ⇔ 149	On
		150 ⇔ 164	Random strobe 0–100%, fast to slow
		165 ⇔ 169	On
		170 ⇔ 184	Pulse strobe, fast to slow
		185 ⇔ 189	On
		190 ⇔ 204	Random pulse strobe, fast to slow
		205 ⇔ 209	On
210 ⇔ 224	Strobe 0–100–0%, fast to slow		
225 ⇔ 229	On		
230 ⇔ 244	Random pulse strobe, fast to slow		
245 ⇔ 255	On		
17	Zoom	000 ⇔ 255	Wide to narrow
18	Control	000 ⇔ 009	No function
		010 ⇔ 014	Blackout on pan/tilt
		015 ⇔ 019	Reserved for future use
		020 ⇔ 024	RGBW color mixing mode
		025 ⇔ 029	CMY color mixing mode (R=C, G=M, B=Y)
		030 ⇔ 049	Reserved for future use
		050 ⇔ 054	Pan reset
		055 ⇔ 059	Tilt reset
		060 ⇔ 064	Zoom reset
		065 ⇔ 069	Reserved for future use
		070 ⇔ 074	Reset all
		075 ⇔ 109	Reserved for future use
		110 ⇔ 114	Fast pan/tilt speed
		115 ⇔ 119	Slow pan/tilt speed
		120 ⇔ 124	Slow fan mode
		125 ⇔ 129	Full fan mode
		130 ⇔ 134	Auto fan mode
		135 ⇔ 139	Fast dimmer mode
140 ⇔ 144	Slow dimmer mode		
145 ⇔ 223	Reserved for future use		
224 ⇔ 231	White mode on		
232 ⇔ 239	White mode off		
240 ⇔ 255	Reserved for future use		
19	Main red	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%



## DMX CHART



### Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting
20	Main red fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
21	Main green	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
22	Main green fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
23	Main blue	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
24	Main blue fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
25	Main white	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
26	Main white fine	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

### Standard (20 channels)

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Pan fine	000 ⇔ 255	0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Tilt fine	000 ⇔ 255	0–100%
5	CTC	000	No function
		001 ⇔ 255	Color temperature, 2800–10000 K
6	Color macro	000	No function
		001 ⇔ 255	Color macros
7	Gobo	000	No function
		001 ⇔ 255	Gobos (indexed)
8	LED macro/ Auto program	000 ⇔ 015	No function
		016 ⇔ 135	LED macros
		136 ⇔ 255	Auto programs
9	LED macro/ Auto program speed	000 ⇔ 127	Auto speed, fast to slow
		128	Hold
		129 ⇔ 255	Auto speed, slow to fast
10	LED macro delay	000 ⇔ 255	Fast to slow

Channel	Function	Value	Percent/Setting		
11	Background color	000	No function		
		001 ⇔ 002	2700K R: 156 G: 118 B: 0 W: 63		
		003 ⇔ 004	3200K R: 156 G: 141 B: 5 W: 89		
		005 ⇔ 006	4200K R: 156 G: 141 B: 14 W: 255		
		007 ⇔ 008	5600K R: 156 G: 207 B: 54 W: 255		
		009 ⇔ 010	8000K R: 130 G: 255 B: 96 W: 255		
		011	Blue R: 0 G: 0 B: 255 W: 0		
		012 ⇔ 048	+ Green R: 0 G: 0-255 B: 255 W: 0		
		049	Cyan R: 0 G: 255 B: 255 W: 0		
		050 ⇔ 086	- Blue R: 0 G: 255 B: 255-0 W: 0		
		087	Green R: 0 G: 255 B: 0 W: 0		
		088 ⇔ 124	+ Red R: 0-255 G: 255 B: 0 W: 0		
		125	Yellow R: 255 G: 255 B: 0 W: 0		
		126 ⇔ 162	- Green R: 255 G: 255-0 B: 0 W: 0		
		163	Red R: 255 G: 0 B: 0 W: 0		
		164 ⇔ 200	+ Blue R: 255 G: 0 B: 0-255 W: 0		
		201	Magenta R: 255 G: 0 B: 255 W: 0		
		202 ⇔ 238	- Red R: 255-0 G: 0 B: 255 W: 0		
		239	Blue R: 0 G: 0 B: 255 W: 0		
		240 ⇔ 247	Color fade, fast to slow		
		248 ⇔ 255	Color snap, fast to slow		
		12	Background dimmer	000 ⇔ 255	0-100%
		13	Main dimmer	000 ⇔ 255	0-100%
14	Shutter	000 ⇔ 019	Off		
		020 ⇔ 024	On		
		025 ⇔ 064	Strobe, fast to slow		
		065 ⇔ 069	On		
		070 ⇔ 084	Strobe 100-0%, fast to slow		
		085 ⇔ 089	On		
		090 ⇔ 104	Strobe 0-100%, fast to slow		
		105 ⇔ 109	On		
		110 ⇔ 124	Random strobe, fast to slow		
		125 ⇔ 129	On		
		130 ⇔ 144	Random strobe 100-0%, fast to slow		
		145 ⇔ 149	On		
		150 ⇔ 164	Random strobe 0-100%, fast to slow		
		165 ⇔ 169	On		
		170 ⇔ 184	Pulse strobe, fast to slow		
		185 ⇔ 189	On		
		190 ⇔ 204	Random pulse strobe, fast to slow		
		205 ⇔ 209	On		
210 ⇔ 224	Strobe 0-100-0%, fast to slow				
225 ⇔ 229	On				
230 ⇔ 244	Random pulse strobe, fast to slow				
245 ⇔ 255	On				
15	Zoom	000 ⇔ 255	Wide to narrow		

## DMX CHART



### Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting
16	Control	000 ⇔ 009	No function
		010 ⇔ 014	Blackout on pan/tilt
		015 ⇔ 019	Reserved for future use
		020 ⇔ 024	RGBW color mixing mode
		025 ⇔ 029	CMY color mixing mode (R=C, G=M, B=Y)
		030 ⇔ 049	Reserved for future use
		050 ⇔ 054	Pan reset
		055 ⇔ 059	Tilt reset
		060 ⇔ 064	Zoom reset
		065 ⇔ 069	Reserved for future use
		070 ⇔ 074	Reset all
		075 ⇔ 109	Reserved for future use
		110 ⇔ 114	Fast pan/tilt speed
		115 ⇔ 119	Slow pan/tilt speed
		120 ⇔ 124	Slow fan mode
		125 ⇔ 129	Full fan mode
		130 ⇔ 134	Auto fan mode
		135 ⇔ 139	Fast dimmer mode
		140 ⇔ 144	Slow dimmer mode
		145 ⇔ 223	Reserved for future use
	224 ⇔ 231	White mode on	
	232 ⇔ 239	White mode off	
	240 ⇔ 255	Reserved for future use	
17	Main red	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
18	Main green	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
19	Main blue	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
20	Main white	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

#### Basic (8 channels)

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Pan fine	000 ⇔ 255	0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Tilt fine	000 ⇔ 255	0–100%
5	Main dimmer	000 ⇔ 255	0–100%

Channel	Function	Value	Percent/Setting
6	Shutter	000 ⇔ 019	Off
		020 ⇔ 024	On
		025 ⇔ 064	Strobe, fast to slow
		065 ⇔ 069	On
		070 ⇔ 084	Strobe 100–0%, fast to slow
		085 ⇔ 089	On
		090 ⇔ 104	Strobe 0–100%, fast to slow
		105 ⇔ 109	On
		110 ⇔ 124	Random strobe, fast to slow
		125 ⇔ 129	On
		130 ⇔ 144	Random strobe 100–0%, fast to slow
		145 ⇔ 149	On
		150 ⇔ 164	Random strobe 0–100%, fast to slow
		165 ⇔ 169	On
		170 ⇔ 184	Pulse strobe, fast to slow
		185 ⇔ 189	On
		190 ⇔ 204	Random pulse strobe, fast to slow
		205 ⇔ 209	On
210 ⇔ 224	Strobe 0–100–0%, fast to slow		
225 ⇔ 229	On		
230 ⇔ 244	Random pulse strobe, fast to slow		
245 ⇔ 255	On		
7	Zoom	000 ⇔ 255	Wide to narrow
8	Control	000 ⇔ 009	No function
		010 ⇔ 014	Blackout on pan/tilt
		015 ⇔ 019	Reserved for future use
		020 ⇔ 024	RGBW color mixing mode
		025 ⇔ 029	CMY color mixing mode (R=C, G=M, B=Y)
		030 ⇔ 049	Reserved for future use
		050 ⇔ 054	Pan reset
		055 ⇔ 059	Tilt reset
		060 ⇔ 064	Zoom reset
		065 ⇔ 069	Reserved for future use
		070 ⇔ 074	Reset all
		075 ⇔ 109	Reserved for future use
		110 ⇔ 114	Fast pan/tilt speed
		115 ⇔ 119	Slow pan/tilt speed
		120 ⇔ 124	Slow fan mode
		125 ⇔ 129	Full fan mode
		130 ⇔ 134	Auto fan mode
		135 ⇔ 139	Fast dimmer mode
		140 ⇔ 144	Slow dimmer mode
		145 ⇔ 223	Reserved for future use
		224 ⇔ 231	White mode on
		232 ⇔ 239	White mode off
		240 ⇔ 255	Reserved for future use

## DMX CHART



### Maverick Force 2 BeamWash

#### Dual Control Pixels Values

#### Advanced (96 channels)

Channel	Function	Value	Percent/Setting
1	Red 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
2	Red fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
3	Green 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
4	Green fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
5	Blue 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
6	Blue fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
7	White 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
8	White fine 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
9	Red 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
10	Red fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
11	Green 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
12	Green fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
13	Blue 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
14	Blue fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
15	White 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
16	White fine 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
17	Red 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
18	Red fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
19	Green 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
20	Green fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
21	Blue 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
22	Blue fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
23	White 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
24	White fine 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
25	Red 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
26	Red fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
27	Green 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
28	Green fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
29	Blue 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
30	Blue fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
31	White 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
32	White fine 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
33	Red 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
34	Red fine 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
35	Green 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
36	Green fine 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
37	Blue 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
38	Blue fine 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
39	White 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
40	White fine 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
41	Red 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
42	Red fine 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
43	Green 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
44	Green fine 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
45	Blue 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

Channel	Function	Value	Percent/Setting
46	Blue fine 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
47	White 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
48	White fine 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
49	Red 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
50	Red fine 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
51	Green 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
52	Green fine 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
53	Blue 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
54	Blue fine 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
55	White 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
56	White fine 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
57	Red 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
58	Red fine 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
59	Green 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
60	Green fine 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
61	Blue 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
62	Blue fine 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
63	White 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
64	White fine 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
65	Red 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
66	Red fine 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
67	Green 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
68	Green fine 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
69	Blue 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
70	Blue fine 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
71	White 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
72	White fine 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
73	Red 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
74	Red fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
75	Green 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
76	Green fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
77	Blue 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
78	Blue fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
79	White 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
80	White fine 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
81	Red 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
82	Red fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
83	Green 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
84	Green fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
85	Blue 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
86	Blue fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
87	White 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
88	White fine 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
89	Red 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
90	Red fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
91	Green 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
92	Green fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%



## DMX CHART



### Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting
93	Blue 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
94	Blue fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
95	White 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
96	White fine 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

### Standard (48 channels)

Channel	Function	Value	Percent/Setting
1	Red 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
2	Green 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
3	Blue 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
4	White 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
5	Red 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
6	Green 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
7	Blue 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
8	White 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
9	Red 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
10	Green 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
11	Blue 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
12	White 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
13	Red 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
14	Green 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
15	Blue 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
16	White 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
17	Red 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
18	Green 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
19	Blue 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
20	White 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
21	Red 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
22	Green 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
23	Blue 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
24	White 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
25	Red 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
26	Green 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
27	Blue 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
28	White 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
29	Red 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
30	Green 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
31	Blue 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
32	White 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
33	Red 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
34	Green 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
35	Blue 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
36	White 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

Channel	Function	Value	Percent/Setting
37	Red 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
38	Green 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
39	Blue 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
40	White 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
41	Red 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
42	Green 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
43	Blue 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
44	White 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
45	Red 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
46	Green 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
47	Blue 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
48	White 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

### Basic (36 channels)

Channel	Function	Value	Percent/Setting
1	Red 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
2	Green 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
3	Blue 1	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
4	Red 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
5	Green 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
6	Blue 2	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
7	Red 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
8	Green 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
9	Blue 3	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
10	Red 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
11	Green 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
12	Blue 4	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
13	Red 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
14	Green 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
15	Blue 5	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
16	Red 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
17	Green 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
18	Blue 6	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
19	Red 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
20	Green 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
21	Blue 7	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
22	Red 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
23	Green 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
24	Blue 8	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
25	Red 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
26	Green 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
27	Blue 9	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
28	Red 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
29	Green 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%

## DMX CHART



### Maverick Force 2 BeamWash

Channel	Function	Value	Percent/Setting
30	Blue 10	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
31	Red 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
32	Green 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
33	Blue 11	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
34	Red 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
35	Green 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%
36	Blue 12	000 ⇔ 255	RGBW Mode: 0–100% / CMY Mode: 100–0%