ELIMINATOR.



FROST FX BAR W User Instructions

©2021 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. Eliminator Lighting, ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

ADJ Products, LLC and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

ADJ PRODUCTS LLC World Headquarters

6122 S. Eastern Ave. I Los Angeles, CA 90040 USA Tel: 800-322-6337 I Fax: 323-582-2941 I www.adj.com lsupport@adj.com

ADJ Supply Europe B.V.

Junostraat 2 | 6468 EW Kerkrade | Netherlands

Tel: +31 45 546 85 00 | Fax: +31 45 546 85 99 | www.americandj.eu | service@americandj.eu

Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

DOCUMENT VERSION

Due to additional product features and/or enhancements, an updated version of this document may be available online.

Please check <u>www.eliminatorlighting.com</u> for the latest revision/update of this manual before beginning installation and/or programming.

Date	Document Version	Software Version >	DMX Channel Mode	Notes
08/25/21	1	1.0	6/8/14/14/17/56/60/66/69	Initial Version

CONTENTS

General Information	4
Limited Warranty (USA Only)	5
Safety Guidelines	6
Overview	8
Installation	9
DMX Set Up	12
DMX Addressing	14
System Menu	15
DMX Traits: Channel Functions & Values	16
Color Macro Chart	18
Dimmer Mode Chart	19
Power Linking I Cleaning	20
Specifications	21

GENERAL INFORMATION

INTRODUCTION

Please read and understand all instructions in this manual carefully and thoroughly before attempting to operate these products. These instructions contain important safety and use information.

UNPACKING

The products in this kit have been thoroughly tested and have been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect each unit included for damage and be sure all accessories necessary to operate the units have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this kit to your dealer without first contacting customer support at the number listed below. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

WARRANTY RETURNS

All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support.

LIMITED WARRANTY (USA ONLY)

- A. Eliminator Lighting, an ADJ Products, LLC brand, hereby warrants, to the original purchaser, ADJ Products, LLC products to be free of manufacturing defects in material and workmanship for a prescribed period from the date of purchase (see specific warranty period on reverse). This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, you must obtain a Return Authorization number (RA#) before sending back the product-please contact ADJ Products, LLC Service Department at 800-322-6337. Send the product only to the ADJ Products, LLC factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, ADJ Products, LLC will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, ADJ Products, LLC shall have no liability whatsoever for loss of or damage to any such accessories, or for the safe return thereof.
- C. This warranty is void of the serial number has been altered or removed; if the product is modified in any manner which ADJ Products, LLC concludes, after inspection, affects the reliability of the product, if the product has been repaired or service by anyone other than ADJ Products, LLC factory unless prior written authorization was issued to purchaser by ADJ Products, LLC; if the product is damaged because not properly maintained as set forth in the instruction manual.
- D. This is not a service contact, and this warranty does not include maintenance, cleaning or periodic check up. During the period specified above, ADJ Products, LLC will replace defective parts at its expense with new or refurbished parts, and will absorb all expenses for warrant service and repair labor by reason of defects in material or workmanship. The sole responsibility of ADJ Products, LLC under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of ADJ Products, LLC. All products covered by this warranty were manufactured after August 15, 2012, and bear identifying marks to that effect.
- E. ADJ Products, LLC reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by ADJ Products, LLC in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall ADJ Products, LLC be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.
- G. This warranty is the only written warranty applicable to ADJ Products, LLC Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

LIMITED WARRANTY PERIODS

- All Eliminator Lighting products (except laser diodes) = 1-year (365 days) Limited Warranty (Such as: Special Effect Lighting, Intelligent Lighting, UV lighting, Strobes, Fog Machines, Bubble Machines, Mirror Balls, Par Cans, Trussing, Lighting Stands etc. excluding LED and lamps)
- Laser Products = 1 Year (365 Days) Limited Warranty (excludes laser diodes which have 6 month limited warranty)
- Batteries = 180 Day Limited Warranty (excluding batteries which have a 180 day limited warranty)

SAFETY GUIDELINES

To guarantee a smooth operation, it is important to follow all instructions and guidelines in this manual. ADJ Products, LLC is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture and only the original rigging parts included with this fixture should be used for installation. Any modifications to the fixture and/or the included mounting hardware will void the original manufactures warranty and increase the risk of damage and/or personal injury.



PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED



THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF; DOING SO WILL VOID YOUR MANUFACTURES WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURES WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.

 \wedge

DO NOT PLUG FIXTURE INTO A DIMMER PACK! NEVER OPEN THIS FIXTURE WHILE IN USE! UNPLUG POWER BEFORE SERVICING FIXTURE! NEVER TOUCH FIXTURE DURING OPERATION AS IT MAY BE HOT! KEEP FLAMMABLE MATERIALS AWAY FROM FIXTURE!



ENSURE ALL CONNECTIONS AND END CAPS ARE PROPERLY SEALED WITH A DIELECTRIC GREASE (AVAILABLE AT MOST ELECTRICAL SUPPLIERS) TO PREVENT WATER CORROSION AND/OR ELECTRICAL SHORT CIRCUIT.



IF THE FIXTURE IS EXPOSED TO ENVIRONMENTAL TEMPERATURE CHANGES SUCH AS RELOCATION FROM AN OUTDOOR COLD TO AN INDOOR WARM ENVIRONMENT, DO NOT POWER THE FIXTURE ON IMMEDIATELY. INTERNAL CONDENSATION AS A RESULT OF ENVIRONMENTAL TEMPERATURE CHANGE CAN CAUSE INTERNAL FIXTURE DAMAGE. LEAVE THE FIXTURE POWERED OFF UNTIL IT HAS REACHED ROOM TEMPERATURE BEFORE POWERING ON.



NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE! RETINA INJURY RISK - MAY INDUCE BLINDNESS! SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK! THIS IS A RISK GROUP 3 (HIGH RISK) PRODUCT ACCORDING TO EN 62471 AND IEC/ TR 62778. THE LUMINAIRE SHOULD BE POSITIONED 63 METERS OR MORE FROM THE OUTPUT OF THE FIXTURE TO REDUCE OR ELIMINATE EXPOSURE.

SAFETY GUIDELINES

DO NOT TOUCH the fixture housing during operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before servicing.

DO NOT shake fixture; avoid brute force when installing and/or operating fixture.

DO NOT operate fixture if the power cord has become frayed, crimped, damaged and/or if any of the power cord connectors are damaged and do not insert into the fixture securely with ease.

NEVER force a power cord connector into the fixture. If the power cord or any of its connectors are damaged, replace it immediately with a new one of similar power rating.

DO NOT block any air ventilation slots; these must remain clean and never blocked. Allow approx. 7.9" (20cm) between fixture and other devices or a wall for proper cooling.


When installing fixture in a suspended environment, always use mounting hardware that is no less than M10 x 25 mm, and always attach an appropriately rated safety cable.

ALWAYS disconnect fixture from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end; never pull out the plug by tugging the wire portion of the cord.

During the initial operation of this fixture, a light smoke or smell may emit from the interior of the fixture. This is a normal process and is caused by excess paint in the interior of the casing burning off from the heat associated with the lamp and will decrease gradually over time.

Consistent operational breaks will ensure fixture will function properly for many years. **ONLY** use the original packaging and materials to transport the fixture in for service.

OVERVIEW

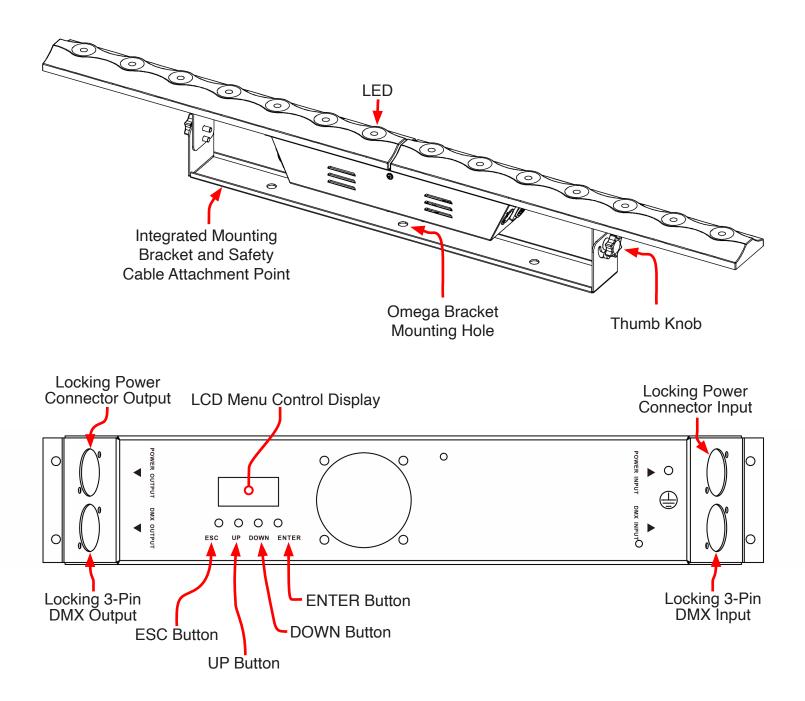

8

INSTALLATION



FLAMMABLE MATERIAL WARNING

Keep fixture at least 7.9in. (0.2m) away from any flammable materials, decorations, pyrotechnics, etc.



ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.



MINIMUM DISTANCE TO OBJECTS/SURFACES MUST BE 40 FEET (12 METERS)

MAXIMUM TEMPERATURE OF EXTERNAL SURFACE 167°F (75°C)

DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!

Fixture MUST be installed following all local, national, and country commercial electrical and construction codes and regulations. Before rigging/mounting the fixture to any metal truss/structure or placing the fixture on any surface, a professional equipment installer MUST be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture, clamps, cables, and accessories.

Overhead fixture installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable that meets all local, national, and country codes and regulations.

Fixture ambient operating temperature range is -4°F to 104°F. (-20°C to 40°C) Do not use this fixture outside this temperature range.


Fixture should be installed in areas outside walking paths, seating areas, or away from areas were unauthorized personnel might reach the fixture by hand.

NEVER stand directly below the fixture when rigging, removing, or servicing.

Allow approximately 15-minutes for the fixture to cool down before servicing.

INSTALLATION

Screw one clamp each via a M12 screw and nut into the Omega brackets. Insert the quick-lock fasteners of the Omega brackets into the respective holes on the bottom of the Frost FX Bar W. Tighten the quick-lock fasteners fully clockwise. Pull a safety cable through the safety cable attachment points located on the base plate and over the trussing system or a safe fixation spot. Insert the end in the carabiner and tighten the safety screw.

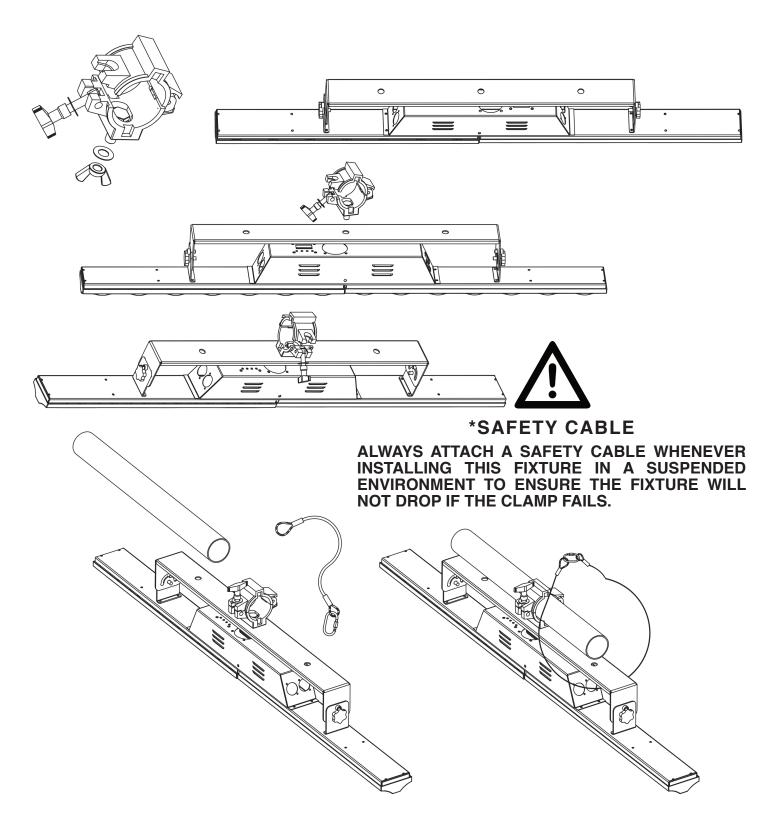


INSTALLATION

When installing the unit, the trussing or area of installation must be able to hold 10 times the weight without any deformation. When installing, the unit must be secured with a secondary safety attachment, e.g. and appropriate safety cable. Never stand directly below the unit when mounting, removing, or servicing the unit.

Overhead mounting requires extensive experience, including calculating working load limits, installation material being used, and periodic safety inspection of all installation material and unit. If you lack these qualifications, do not attempt the installation yourself. Installations should be checked by a skilled person once a year.

The Frost FX Bar W is fully operational in three different mounting positions, hanging upside-down from a ceiling or trussing, sideways on trussing, or set on a flat level surface. Be sure this fixture is kept at least 12m (40ft) away from any flammable materials (decoration etc.). Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails. Never use the carrying handles for secondary attachment.

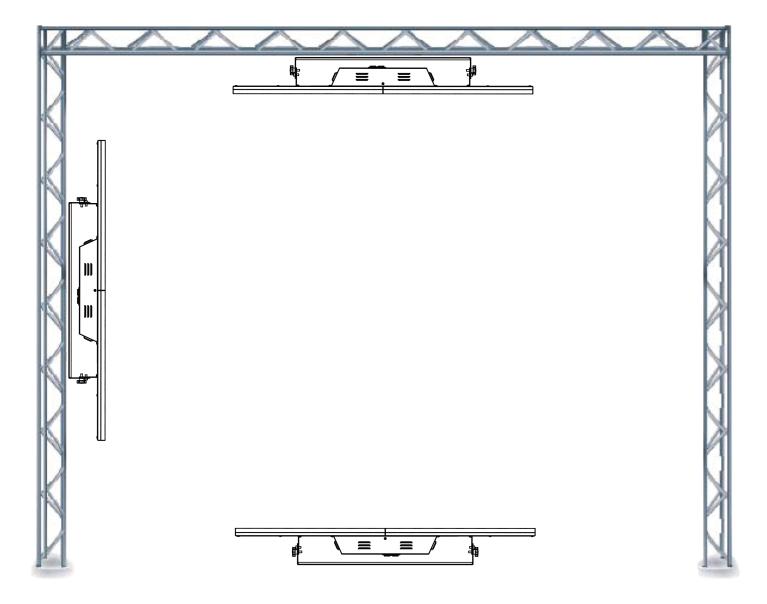

SETUP


DMX-512: DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA "IN" and DATA "OUT" XLR terminals located on all DMX fixtures (most controllers only have a DATA "OUT" terminal).

DMX Linking: DMX512 is a standard digital network control protocol allowing all makes and models of luminairs and fixtures from different manufactures to be linked and operated from a single controller, provided that the controller and all fixtures are DMX512 compliant. To ensure proper DMX data transmission when using several DMX fixtures, try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

DMX Data Cable Requirements: The Fixture can be controlled via DMX512 protocol. Your unit and your DMX controller require a standard 3-pin XLR connector for data input and data output; we recommend Accu-Cable DMX cables. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable can usually be purchased at most professional lighting stores). Ensure that your cables are comprised of one male and one female XLR connector, and remember that the DMX cable must be daisy chained, and cannot be split.



Notice: Be sure to follow figures two and three when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behavior.

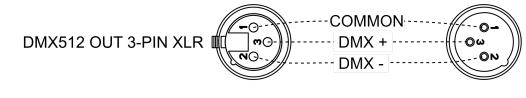


DMX512 IN 3-PIN XLR

XLR Male Socket	XLR Female Socket
1 Ground 2 Cold 2 Cold 3 O 3 Hot	2 Cold

XLR Pin Configuration
Pin 1 = Ground
Pin 2 = Data Compliment (negative)
Pin 3 = Data True (positive)

SETUP

Special Note: Line Termination. When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 110-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will decrease the possibilities of erratic behavior.

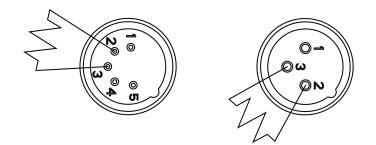

A DMX512 terminator reduces signal errors, avoiding most signal reflection interference. Connect PIN 2 (DMX-) and PIN 3 (DMX+) of the last fixture in series with a 120 Ohm, 1/4 W Resistor to terminate the DMX512.

5-Pin XLR DMX Connectors: Some manufactures use 5-pin DMX- 512 data cables for DATA transmission in place of 3-pin. 5-pin DMX fixtures may be integrated into a 3-pin DMX line with a 5-pin to 3-pin adapter cable. Although these adapters are available at most electric stores, one can be assembled using the conversion chart.



3-Pin XLR to 5-Pin XLR Conversion						
Ground/Shield	Pin 1	Pin 1				
Data Compliment (- signal)	Pin 2	Pin 2				
Data True (+ signal)	Pin 3	Pin 3				
Not Used		Do Not Use				
Not Used		Do Not Use				

DMX ADDRESSING

All fixtures should be given a DMX starting address when using a DMX controller, so the correct fixture responds to the correct control signal. This digital starting address is the channel number from which the fixture starts to "listen" to the digital control signal sent out from the DMX controller. The assignment of this starting DMX address is achieved by setting the correct DMX address on the digital control display on the fixture.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each individual fixture. Setting all fixtures to the same DMX address will cause all fixtures to react in the same way, in other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set each fixture to a different DMX address, each unit will start to "listen" to the channel number you have set, based on the quantity of DMX channels of each fixture. That means changing the settings of one channel will only affect the selected fixture.

In the case of the Frost fx bar w, when in 8 channel mode you should set the starting DMX address of the first unit to 1, the second unit to 9 (8 + 1), the third unit to 17 (9 + 8), and so on.


Channel Mode	Unit 1 Address	Unit 2 Address	Unit 3 Address	Unit 4 Address
3 Channels	1	4	7	10
8 Channels	1	9	17	25
14 Channels	1	15	29	43
14 Channels	1	15	29	43
17 Channels	1	18	35	52
56 Channels	1	57	113	169
60 Channels	1	61	121	181
66 Channels	1	67	133	199
69 Channels	1	70	139	208

SYSTEM MENU

The fixture includes an easy to navigate system menu control panel display where all necessary settings and adjustments are made. During normal operation, pressing the **ESC** button once will return the current menu to the last menu. In the main menu, you can navigate through the different functions and access the sub-menus with the **UP** and **DOWN** buttons. When you reach a field that requires adjusting, press the **ENTER** button to access that field and use the **UP** and **DOWN** buttons to adjust the field. Pressing the **ENTER** button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing the **ESC** button.

ESC button: Return the current menu to the last menu.

UP button: Press UP to move up the next menu, or to increase a selection value. Down button: press DOWN to move down to the next menu, or to decrease a selection value. ENTER button: press ENTER to select menu, or confirm selected value.



0 0 0 0

ESC UP DOWN ENTER

Menu	Submenu	Description		
d001	XXX	DMX control mode		
Auto	XXX Au.01 (Auto 1) Au.02 (Auto 2) Au.03 (Auto 3) Au.04 (Auto 4) Au.05 (Auto 5) Au.06 (Auto 6) Au.07 (Auto 7) Au.08 (Auto 8) Au.09 (Auto 9) Au.10 (Auto 10) Au.12 (Auto 12)	S (01-16) Auto mode speed slow to fast		
	Au.12 (Auto 12) Au.13 (Auto 13) Au.14 (Auto 14) Au.15 (Auto 15) Sod1 (Sound Mode 1)	-		
Sound	Sod2 (Sound Mode 2)	SC-(1-9) Sensitivity 1-9		
	CH06	6 Channels mode		
	CH08	8 Channels mode		
	Ch14	14 Channels mode1		
	CH14	14 Channels mode2		
CH-	CH17	17 Channels mode		
	CH56	56 Channels mode		
	CH60	60 Channels mode		
	CH66	66 Channels mode		
	CH69	69 Channels mode		
TEST		LED Test		
Ver	V001	Software version		
PSET	OFF	Normal Pixel Orientation Pixel Flip Disabled		
	ON	Pixel Flip Pixel Flip Enabled		

DMX TRAITS: CHANNEL FUNCTIONS & VALUES (6/8/14/14/17/56/60/66/69 DMX Channels)

									Values	Functions
										White Main Pixels 1-14
	1	1	1	1					000-255	0% - 100%
	2	2		2						Red Background Color 1-14
	2	2		2					000-255	0% - 100%
	3	3		3						Green Background Color 1-14
	0	0		<u> </u>						0% - 100%
	4	4		4						Blue Background Color 1-14
	•			· ·						0% - 100%
					1	1	1	1	000 055	White Main Pixel 1
									000-255	0% - 100% White Main Pixel 2
					2	2	2	2		0% - 100%
										White Main Pixel 3
					3	3	3	3		0% - 100%
										White Main Pixel 4
					4	4	4	4		0% - 100%
									000 200	
										White Main Pixel 14
					14	14	14	14		0% - 100%
					4.5	4.5	4.5	4.5		Red Background Color 1
					15	15	15	15	000-255	0% - 100%
					16	16	16	16		Green Background Color 1
					10	10	10	10	000-255	0% - 100%
					17	17	17	17		Blue Background Color 1
					17	17	17	17	000-255	0% - 100%
					54	54	54	54		Red Background Color 14
					04	04	07		000-255	0% - 100%
					55	55	55	55		Green Background Color 14
										0% - 100%
					56	56	56	56		Blue Background Color 14
										0% - 100% Background Color 1-14, COLOR
										TEMPERATURE LINEAR 2700-6000K
			2	5				57		No Function
										2700K-6000K
										Background Color 1-14, COLOR
										TEMPERATURE PRESETS
									000-031	No Function
			3	6				58	032-255	
			3	0				50	077-121	
									122-166	
									167-211	
		ļ					L	L	212-255	
			4	7				59	000-255	Background Pixel 1-14, 64 Color Macros (See Color Macros Chart)
I T										White Pixel 1-14 Shutter
										Shutter Closed (LEDs OFF)
										Shutter OPEN (LEDs ON)
	_	_	_	_						Strobe effect slow to fast
	5	5	5	8		57	57	60		Shutter OPEN (LEDs ON)
										Pulse effect in sequences
										Shutter OPEN (LEDs ON)
										Random strobe effect slow to fast
						50			224-255	
	6	6	6	9		58	58	61	1000-255	White Pixel 1-14 Dimmer

DMX TRAITS: CHANNEL FUNCTIONS & VALUES (6/8/14/14/17/56/60/66/69 DMX Channels)

									Values	Functions
					5001			0301		Background Color 1-14 Shutter
										Shutter Closed (LEDs OFF)
										Shutter OPEN (LEDs ON)
	_	_	_			50	50			Strobe effect slow to fast
	7	7	7	10		59	59	62		Shutter OPEN (LEDs ON)
										Pulse effect in sequences
										Shutter OPEN (LEDs ON)
									192-223	Random strobe effect slow to fast
									224-255	Open
	8	8	8	11		60	60	63	000-255	Background Color 1-14 Dimmer
										White LEDs Auto
1										No Function
									15-29	
									30-44	
									45-59	
									60-74	
									75-89	
									90-104	
1			9	12			61	64	105-119	Auto 7
							-	-	120-134	
									135-149	
									150-164	
									165-179	
									180-194	Auto 12
									195-209	
									210-224	Auto 14
									225-239	Auto 15
									240-255	
2		10	10	13			62	65		White LEDs Auto Speed (Slow to Fast)
2		11	11	14			63	66	000-255	White LEDs Auto Fade
										RGB LED's Auto
										No Function
									15-29	
									30-44	
									45-59	
									60-74	RGB 4
									75-89	
									90-104	
4		12	12	15			64	67	105-119	
-		12	12				04	07	120-134	
									135-149	
									150-164	
									165-179	
						180-194				
									195-209	
									210-224	
									225-239	
		12	4.0						240-255	
5		13	13	16			65	68		RGB LED's Auto Speed (Slow to Fast)
6		14	14	17			66	69	000-255	RGB LED's Auto Fade
		14	14	1/			00	09	1000-200	

COLOR MACRO CHART

Ostan		RGB COLOR INTENSITY				
Color	DMX VALUE	RED	GREEN	BLUE		
R02 BASTARD AMBER	1-7	255	206	143		
R04 MEDIUM AMBER	8-15	254	177	153		
R09 PALE AMBER GOLD	16-23	254	192	138		
R316 GALLO GOLD	24-31	254	165	98		
R21 GOLDEN AMBER	32-39	254	121	0		
R26 LIGHT RED	40-47	176	17	0		
R27 MEDIUM RED	48-55	96	0	11		
R36 MEDIUM PINK	56-63	234	139	171		
R339 BROADWAY PINK	64-71	224	5	97		
R344 FOLLIES PINK	72-79	175	77	173		
R52 LIGHT LAVENDER	80-87	119	130	199		
R54 SPECIAL LAVENDER	88-95	147	164	212		
R57 LAVENDER	96-103	88	2	163		
R59 INDIGO	104-111	0	38	86		
R361 HEMSLEY BLUE	112-119	0	142	208		
R362 TIPTON BLUE	120-127	52	148	209		
R64 LIGHT STEEL BLUE	128-135	1	134	201		
R67 LIGHT SKY BLUE	136-143	0	145	212		
R68 SKY BLUE	144-151	0	121	192		
R69 BRILLIANT BLUE	152-159	0	129	184		
R76 LIGHT GREEN BLUE	160-167	0	83	115		
R79 BRIGHT BLUE	168-175	0	97	166		
R80 PRIMARY BLUE	176-183	1	100	167		
R382 CONGO BLUE	184-191	0	40	167		
R87 PALE YELLOW GREEN	192-199	209	219	182		
R89 MOSS GREEN	200-207	42	165	85		
R91 PRIMARY GREEN	208-215	0	46	35		
L200 DOUBLE CTB	216-223	8	107	222		
FULL RED	224-231	255	0	0		
FULL GREEN	232-239	0	255	0		
FULL BLUE	240-247	0	0	255		
WHITE	248-255	255	255	255		

DIMMER MODE CHART

	0 sec	Fade Time	1 sec	c Fade Time
Dimming Curve Ramp Effect	0	255	o	255
	Rise Time (ms)	Down Time (ms)	Rise Time (ms)	Down Time (ms)
Standard (default)	0	0	0	0
Stage	780	1100	1540	1660
TV	1180	1520	1860	1940
Architectural	1380	1730	2040	2120
Theatre	1580	1940	2230	2280
Stage 2	0	1100	0	1660

Dimming Speed				
DMX Value	Delay and Menu Display Time			
121	0.1Sec.			
122	0.2Sec.			
123	0.3Sec.			
124	0.4Sec.			
125	0.5Sec.			
126	0.6Sec.			
127	0.7Sec.			
128	0.8Sec.			
129	0.9Sec.			
130	1.0Sec.			
131	1.5Sec.			
132	2.0Sec.			
133	3.0Sec.			
134	4.0Sec.			
135	5.0Sec.			
136	6.0Sec.			
137	7.0Sec.			
138	8.0Sec.			
139	9.0Sec.			
140	10Sec.			

POWER LINKING

With this feature you can connect the fixtures to one another using the power cable input and output sockets.

NOTE: USE CAUTION WHEN POWER LINKING OTHER FIXTURES AS THE POWER CONSUMPTION OF OTHER MODEL FIXTURES MAY EXCEED THE MAX POWER OUTPUT ON THIS FIXTURE! CHECK SILK SCREEN FOR MAX AMPS.

CLEANING

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

- 1. Use a damp microfiber cloth to wipe down the outside casing, and to clean the external optics. We recommend that you clean the external optics every 20 days.
- 2. Always be sure to dry all parts completely before plugging the unit back in.
- 3. Opening the unit will void warranty.

Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew).

SPECIFICATIONS

Input Voltage: 110-240VAC 50-60Hz
Power Supply: 55w
Lamp: 14pcs 3W Cree Cool-white (6000k)+84pcs 5050 3in1 smd LED
Control Mode: DMX512/ Auto mode/Sound mode/
Dimming: 0–100°
Angle: 17°
DMX Channel: CH06/CH08/Ch14/CH14/CH56/CH60/CH66/CH69
Display: 4 button LED display
Connection: 3-pin Data in/out
Power Connector in/out
Material: Steel housing
Dimensions:
Product Dimensions: 39.4"x2.8"x4.8" (1000mmx70mmx121.4mm)
Package Dimensions: 41.5"x5.5"x6.3" (1055mmx140mmx160mm)
N.W. 3Kg
G.W.: 3.6Kg
Included Items: 1 Power cord

DIMENSIONS

