
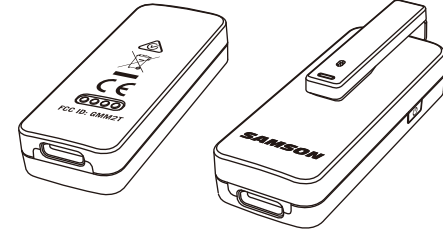


Go Mic Mobile® 2

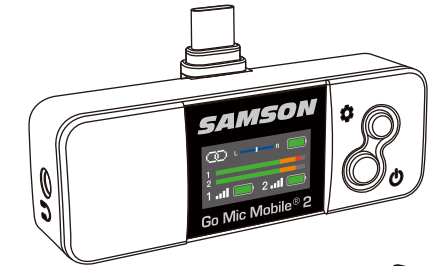

OWNER'S MANUAL

SAMSON

Go Mic Mobile 2 is a compact and micro-miniature wireless microphone system for mobile interviews, education, house of worship, as well as other applications.

Featuring a plug and play design, the Go Mic Mobile 2's receiver can interface directly with Apple and Android devices via its lightning or USB-C connector. Analog outputs are available for connecting to a mixer, DSLR camera, or other external recording device.

The Go Mic Mobile 2 receiver has an easy to read full color screen to show the systems current operating status. Transmitters, Receiver, and charging case have lithium-ion batteries – a minimum of 4 hour operating time. All components can be stored in the charging case, for ease of portability.

The possibilities are endless, from video, interview, podcast, and live streaming – Samson's Go Mic Mobile 2 is both versatile and reliable, and simple to operate.

CONTACT OUR SUPPORT TEAM: support@samsontech.com
Our experts can help you resolve any issues.



@samson




@samson_technologies


Samson Distribution LLC
278-B Duffy Avenue
Hicksville, New York 11801
www.samsontech.com

Copyright 2024, V1.4

Package Contents

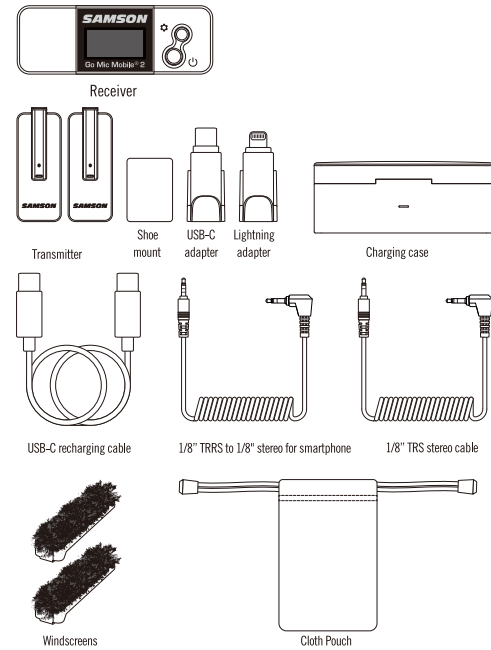


Transmitter Callouts

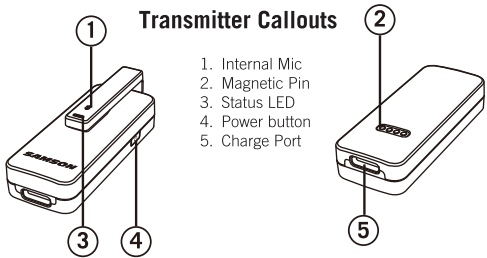


| ☼ Status | LED |
|---------------------|----------------------|
| Not Paired | Slow blinking white |
| Pairing | Rapid blinking white |
| Successfully paired | Solid white |
| Low battery | Blinking red |
| Charging | Solid red |
| Charge complete | Solid green |

Installing the windscreen

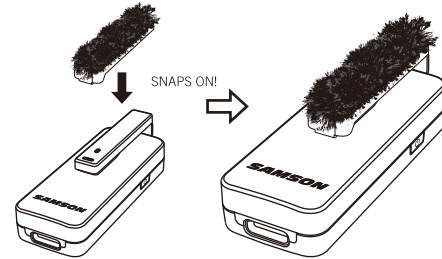


Optional, suggested for windy environments


Receiver Callouts

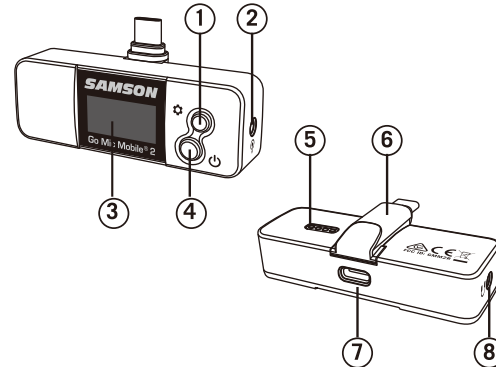

Installing the Receiver Adapters

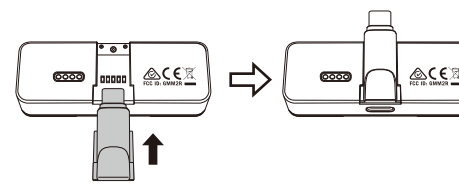

Press and hold the power button for 2 seconds to power on & off

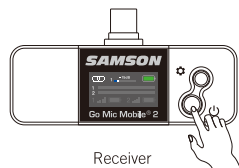


Transmitter 1


Transmitter 2

Pairing the Go Mic Mobile 2

1. Power on the transmitter(s) and receiver to automatically pair your Go Mic Mobile 2 wireless system
2. You can manually pair transmitter and receiver by double-clicking the power button. NOTE - you can cancel pairing by double-clicking the power button.
3. During the pairing process, the signal icon flashes.
4. A check mark (✓) will be displayed after successful pairing.

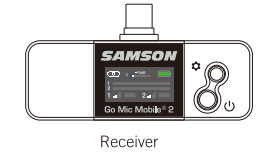

Manual pairing

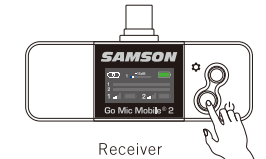

Transmitter

Transmitter


Important Safety Information • Read these instructions • Keep these instructions • Heed all warnings • Follow all instructions • Do not use this apparatus near water • Clean only with dry cloth • Do not block any ventilation openings. Install in accordance with the manufacturer's instructions • Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat • Do not defeat the safety purpose of the polarized or grounding type plug. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet • Protect the power cord from being walked on or pinched, particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus • Only use attachments/accessories specified by the manufacturer • Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over • Unplug the apparatus during lightning storms, or when unused for long periods of time • Refer all servicing to qualified personnel. Service is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped • This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus • Caution - to prevent electrical shock, match wide blade plug with wide slot, fully insert • Please keep a good ventilation environment around the entire unit • The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable • Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire, or the like.



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling. Private household in the 27 member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For Countries not mentioned above, please contact your local authorities for a correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

Go Mic Mobile 2 Receiver Menu

Press, hold the “⚙️” button for 3 sec to enter the menu settings, press the “⚙️” button again to select the function.

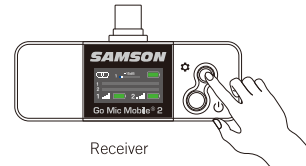

Receiver

Press and hold the “⚙️” button for 3 seconds to enter the menu settings, then short press the “⚙️” button, when the volume bar flashes, short press the “⏻” button to select between stereo and mono/mixed operation.



Stereo output



Mixed output

Press and hold the “⚙️” button for 3 seconds to enter the menu settings, then short press the “⚙️” button, when the volume bar flashes, short press the “⏻” button to select one of the six audio output levels.

